


## 9. Air By-pass Valve

### A: REMOVAL

- 1) Remove the collector cover.
- 2) Disconnect the air by-pass hose (A) from air by-pass valve.
- 3) Remove the air by-pass valve (B) from intercooler.

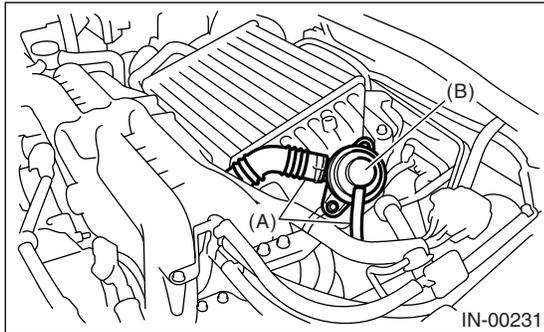


### B: INSTALLATION

Install in the reverse order of removal.

#### *Tightening torque:*

**6.5 N·m (0.66 kgf-m, 4.8 ft-lb)**

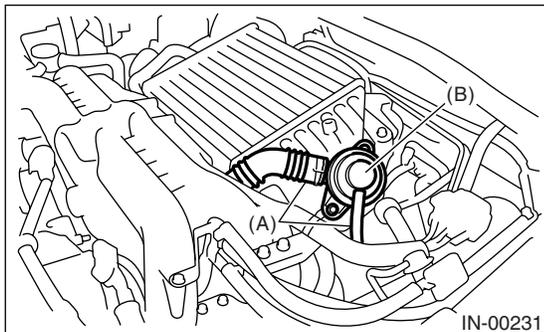

- (A) Air by-pass hose
- (B) Air by-pass valve