


Crankshaft Position Sensor

FUEL INJECTION (FUEL SYSTEMS)

5. Crankshaft Position Sensor


A: REMOVAL

- 1) Remove the collector cover.
- 2) Disconnect the ground cable from battery.

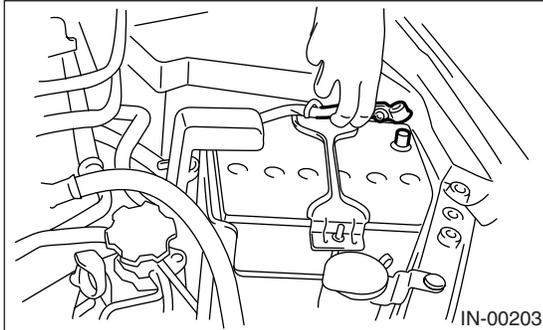


- 3) Remove the generator. <Ref. to SC(H4SO)-20, REMOVAL, Generator.>

- 4) Remove the bolt which installs crankshaft position sensor to cylinder block.

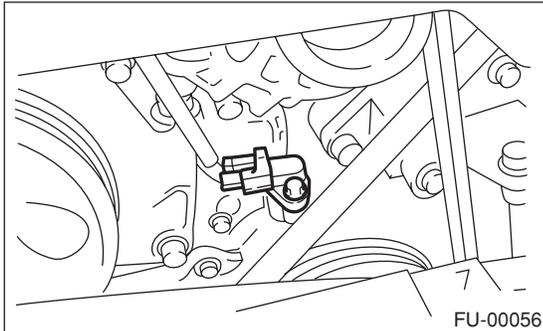

- 5) Remove the crankshaft position sensor, and disconnect the connector from it.

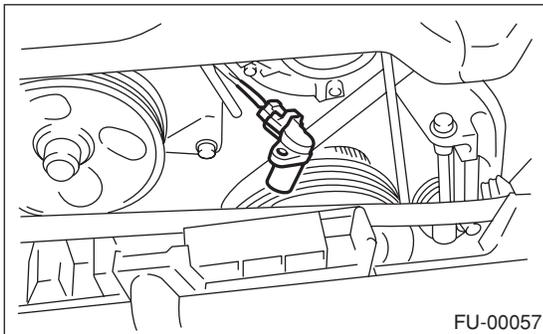

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

T: 6.4 N·m (0.65 kgf-m, 4.7 ft-lb)

