


Rear Exhaust Pipe

EXHAUST

5. Rear Exhaust Pipe

A: REMOVAL


- 1) Lift-up the vehicle.
- 2) Separate the rear exhaust pipe from center exhaust pipe.

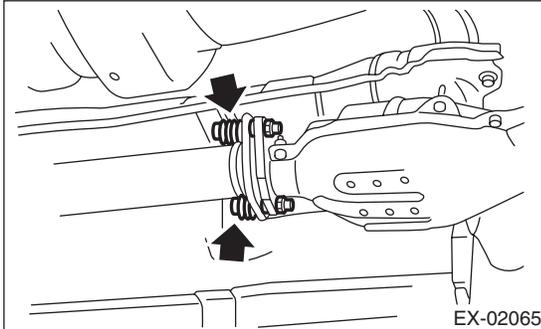


- 3) Separate the rear exhaust pipe from both mufflers.

CAUTION:

Be careful not to pull down the rear exhaust pipe.

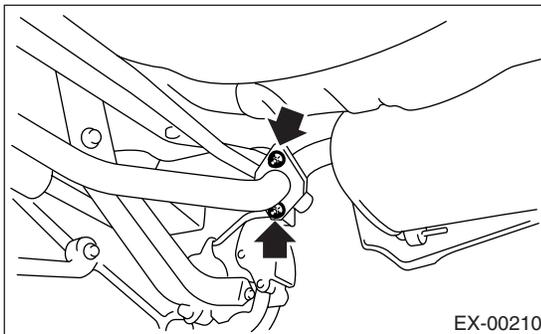

- 4) Apply a coat of spray type lubricant to the mating area of cushion rubber.
- 5) Remove the rear exhaust pipe bracket from cushion rubber.

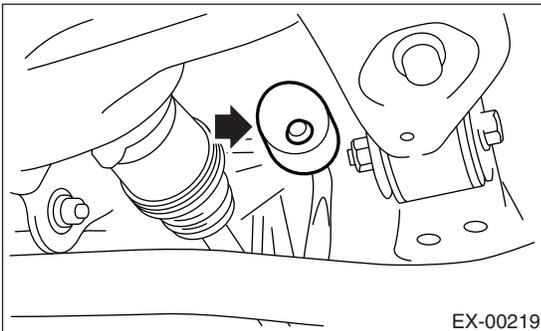


- 6) Remove the rear exhaust pipe.

B: INSTALLATION

- 1) Apply a coat of spray type lubricant to the mating area of cushion rubber.

- 2) Install the rear exhaust pipe bracket to cushion rubber.

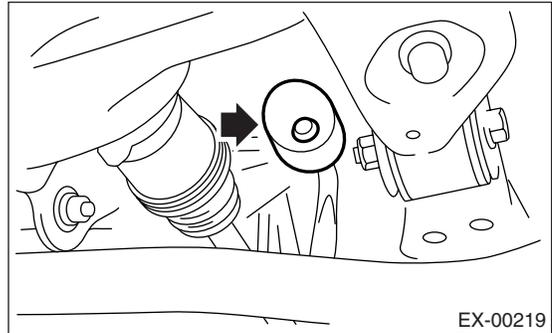


- 3) Install the rear exhaust pipe to both mufflers.

NOTE:

Use a new gasket.

Tightening torque:


48 N·m (4.9 kgf-m, 35.4 ft-lb)

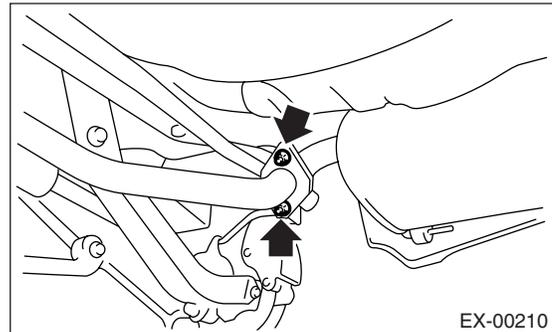

- 4) Install the rear exhaust pipe to center exhaust pipe.

Tightening torque:

35 N·m (3.6 kgf-m, 26.0 ft-lb)

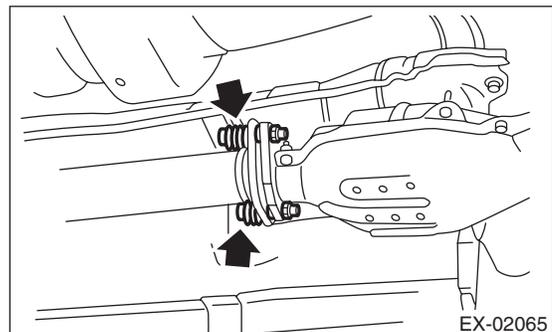

- 5) Lower the vehicle.

C: INSPECTION

- 1) Check the connections and welds for exhaust leaks.
- 2) Check the rear exhaust pipe for holes or rust.
- 3) Check the cushion rubber for wear or crack.