


11.Rear Washer

A: REMOVAL

- 1) Detach the roof spoiler. <Ref. to EI-40, REMOVAL, Roof Spoiler.>
- 2) Remove the washer hose from washer nozzle.
- 3) Push the pawl of nozzle from the reverse side of roof spoiler with a flat tip screwdriver or equivalent, and remove the washer nozzle.

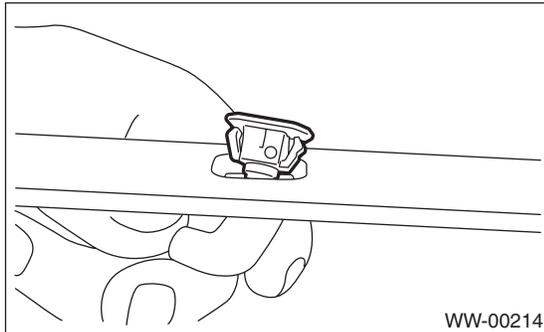

B: INSTALLATION


Install in the reverse order of removal.

C: INSPECTION

- Make sure the nozzle and hose are not clogged.
- Make sure the hose is not bent.
- While the vehicle is at standstill, make sure the washer injection position as shown in the figure.

NOTE:

Washer injection position can not be adjusted.

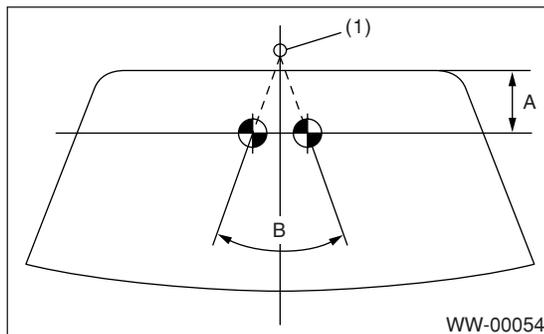

- (1) Nozzle
- (A) 70 mm (2.76 in)
- (B) 70°

Rear Washer

WIPER AND WASHER SYSTEMS
