


## 20.Rearview Mirror

### A: REMOVAL

- 1) Remove the TORX<sup>®</sup> screw (1).
- 2) Slide the rearview mirror (2) to the upper side of windshield glass (3), and remove the rearview mirror (2) from button (4).

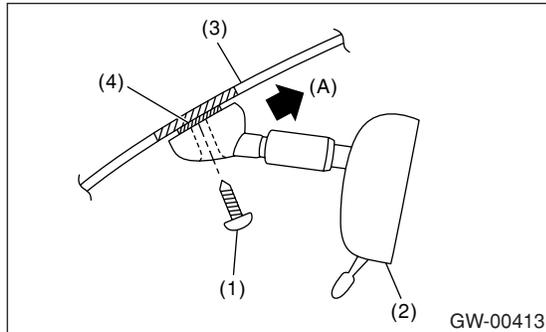

### CAUTION:

- Be careful not to damage the mirror surface.
- Be careful not to damage the windshield glass.

### B: INSTALLATION

Install in the reverse order of removal.

#### *Tightening torque:*

*Refer to "Component" of "Description".*

*<Ref. to GW-6, MIRROR, COMPONENT, General Description.>*

### CAUTION:

When tightening the mounting TORX<sup>®</sup> screw, be sure to observe the tightening torque. Otherwise, the mount may be damaged.

### C: INSPECTION

- Check that the mirror is not damaged.
- Check that the spring is not damaged.