



Sunroof Switch

SUN ROOF/T-TOP/CONVERTIBLE TOP (SUNROOF)

6. Sunroof Switch

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the spot map light lens (A) and sunroof switch mounting screws (B).

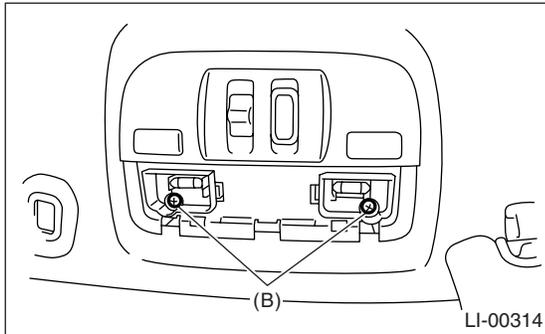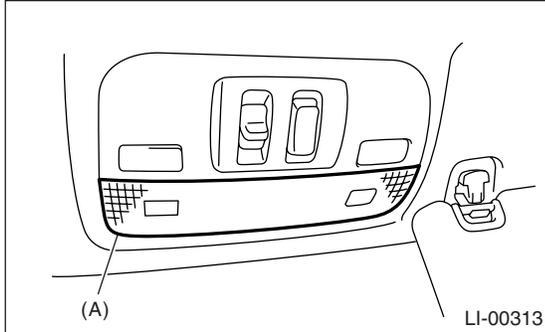

- 3) Disconnect the harness connector, and then remove the sunroof switch.


B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

1. SEDAN MODEL


Measure the sunroof switch resistance.

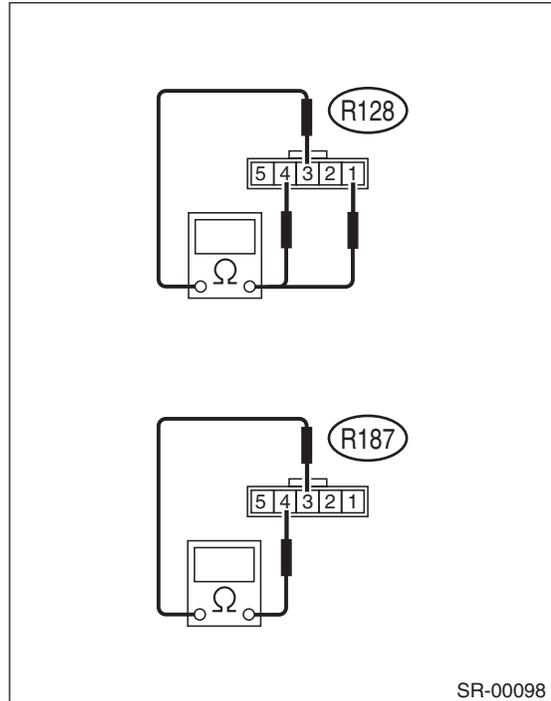

Switch position	Terminal No.	Standard	Connector No.
Open	1 and 3	Less than 1 Ω	R128
Close	3 and 4	Less than 1 Ω	
Tilt up	4 and 3	Less than 1 Ω	R187
Tilt down	3 and 4	Less than 1 Ω	

2. WAGON MODEL

Measure the sunroof switch resistance.

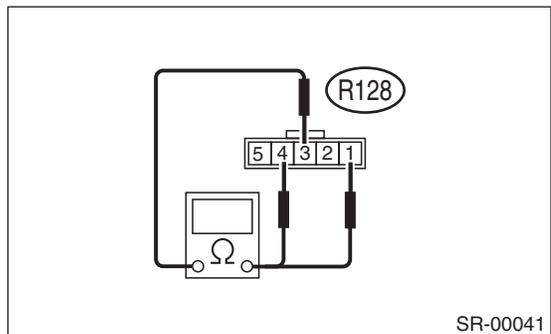

Switch position	Terminal No.	Standard
Open	1 and 3	Less than 1 Ω
Close	3 and 4	Less than 1 Ω

Sunroof Switch

SUN ROOF/T-TOP/CONVERTIBLE TOP (SUNROOF)

NOTE:

If glass lid does not operate or is not supplied with power, move the glass lid using the emergency handle. <Ref. to SR-6, FORCED DRIVE, Glass Lid.>