



4. Front Stabilizer

A: REMOVAL

- 1) Lift-up the vehicle, and then remove the front wheels.
- 2) Remove the front under cover. <Ref. to EI-26, REMOVAL, Front Under Cover.>
- 3) Remove the front crossmember support plate. <Ref. to FS-14, REMOVAL, Front Crossmember Support Plate.>
- 4) Remove the stabilizer link.

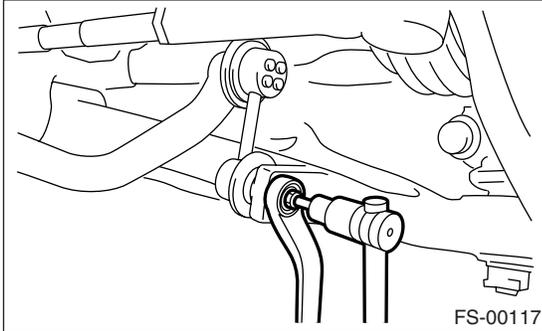

- 5) Remove the stabilizer bracket.

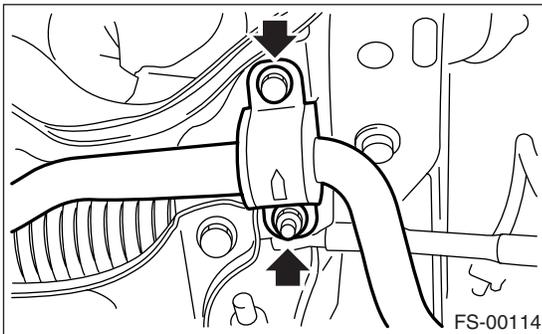


B: INSTALLATION

Install in the reverse order of removal.

NOTE:

- Use a new self-locking nut.
- Ensure that the stabilizer bushing and stabilizer have the same identification colors.
- Install the stabilizer bushing (front crossmember side) while aligning it with the paint mark on stabilizer.

- Stabilizer bracket has an orientation, so install it with the arrow mark faced to the front side of vehicle.

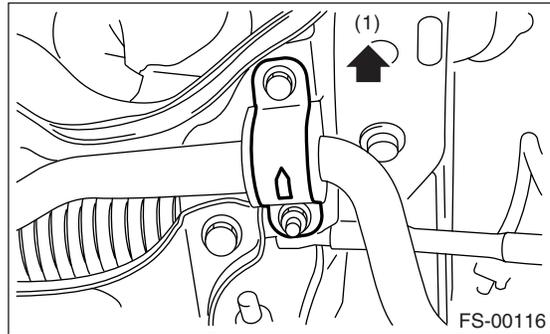

- (1) Front side of vehicle

Tightening torque:

Stabilizer link

45 N·m (4.6 kgf-m, 33.2 ft-lb)

Stabilizer bracket

25 N·m (2.5 kgf-m, 18.1 ft-lb)

C: INSPECTION

- 1) Check the bushing for crack, fatigue or damage.
- 2) Check the stabilizer link for damage.