


Relay and Fuse

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

20. Relay and Fuse


A: LOCATION

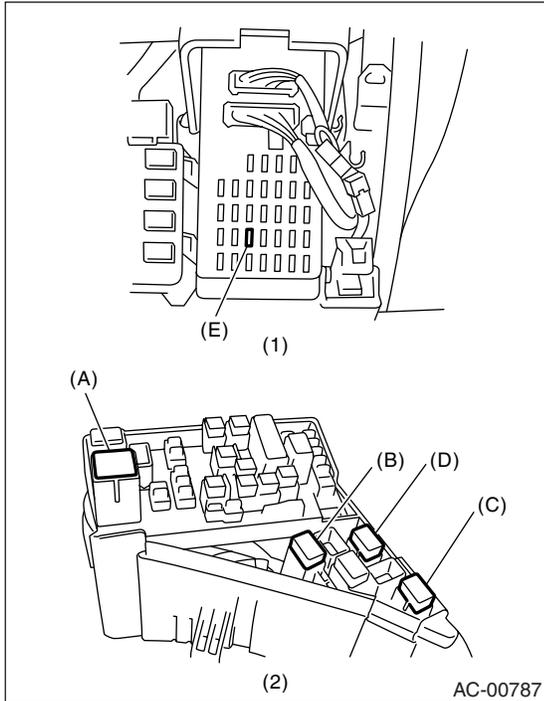

- (1) Joint box
- (2) Main fuse box

Main Fan Relay 1	(A)
Main Fan Relay 2	(B)
Sub Fan Relay	(C)
A/C Relay	(D)
A/C Fuse	(E)

B: INSPECTION

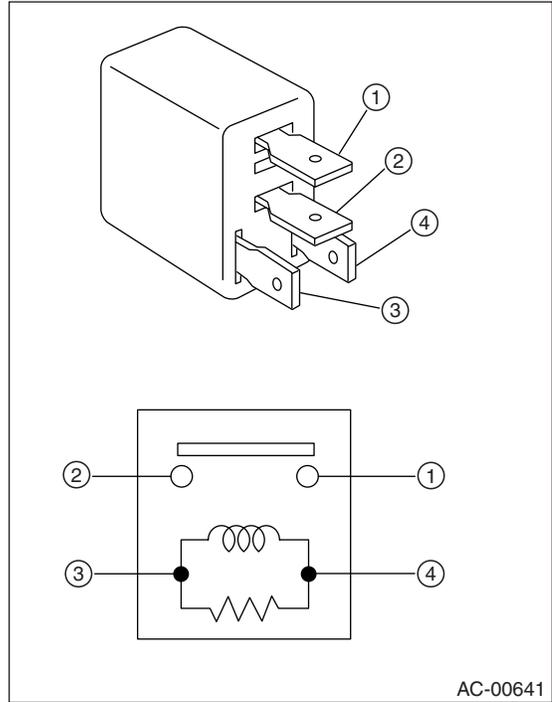

- (3) — (4): Continuity exists
- (1) — (2): Continuity does not exist

While applying battery voltage to the terminal between (3) and (4), check continuity between (1) and (2).
If no continuity exists, replace the relay with a new one.