



17. Door Trim

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the cover (A) at inner remote area.

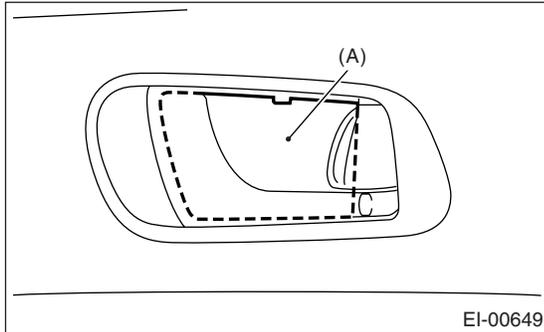


- 3) Push the root of hand grip up ward, and remove the hand grip cover by twisting it to the vehicle forward direction.

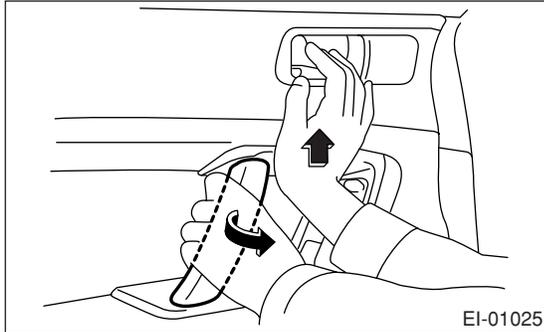


LH side: Counterclockwise
RH side: Clockwise

NOTE:

If the above procedure does not work, use a flat-tip screw driver to pry out the upper side of hand grip cover to remove, with the protection tape attached to both door trim and flat-tip screwdriver.

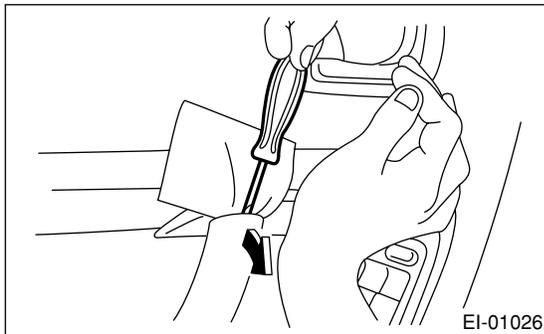


- 4) Loosen the screws.

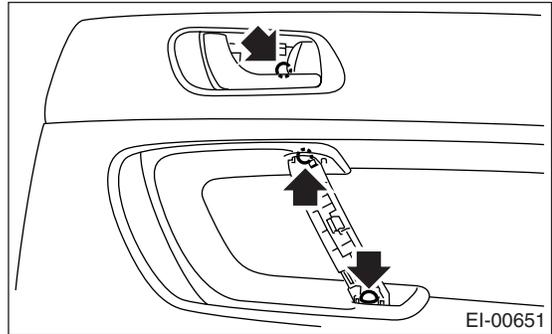


- 5) Remove the clips, and disconnect each connector and wire to remove door trim.

- Front door trim

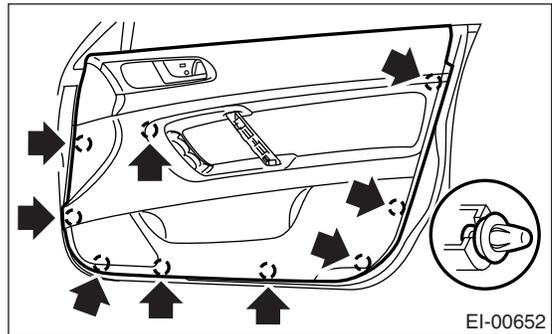

- Rear door trim

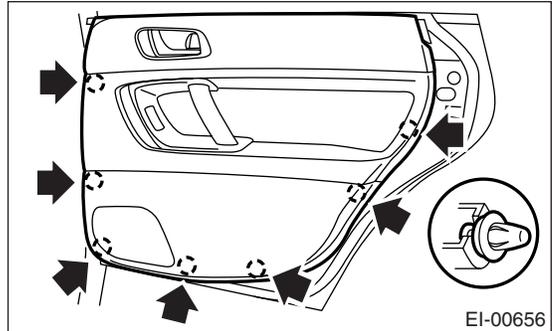

B: INSTALLATION


Install in the reverse order of removal.

NOTE:


Be careful not to install the hand grip cover and plate clip of hand grip in the wrong direction.

- Hand grip cover (front and rear door)

Convex upward

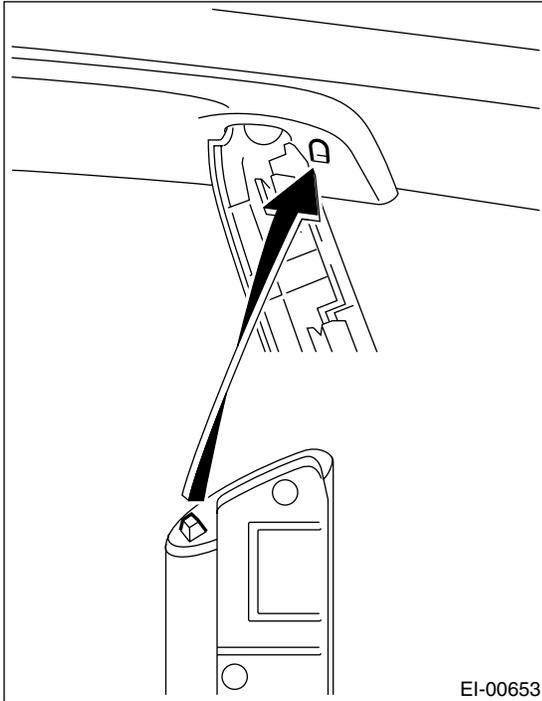

- Bottom clip of the front door faces the opposite direction

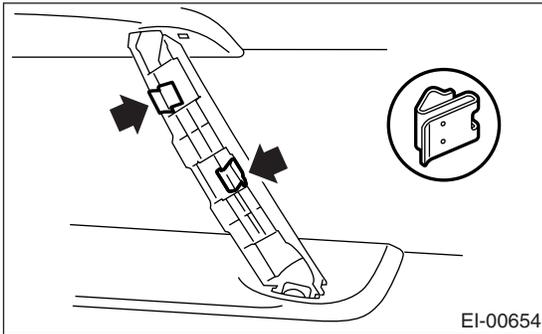

- Lower side of the hand grip cover for front door has pawl part.
- The lowest clip of rear door faces the opposite direction

