

## 54. Instrument Panel Wiring Harness


### A: LOCATION

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
i1	28	★	B-1	B36	Bulkhead wiring harness
i2	8	★	B-4	B37	
i3	20	★	B-5	B38	
i5	20	★	C-1		Fuse & relay box (F/B)
i6	16	★	C-2		Mirror control switch
i10	22	★	B-2		Combination meter
i11	14	★	B-2		
i15	6	★	C-4		A/C control panel (Manual A/C)
i17	16	★	C-4		
i22	4	★	B-3		Hazard switch
i23	2	★	B-4		Glove box illumination
i24	6	★	C-4		Front accessory power supply socket
i26	14	★	C-4		Audio
i29	1	Black	C-4		Audio bracket earth
i51	2	★	B-5		Sun load sensor
i53	18	★	C-5	R98	Rear wiring harness
i55	2	★	C-3		In-vehicle sensor
i59	10	★	B-3		Clock
i76	28	★	C-1	D83	Front door cord LH
i77	12	★	C-1		Joint connector
i78	15	★	C-2		Push switch
i79	6	★	C-2		Illumination control switch
i80	1	★	C-2		Meter diagnosis connector
i81	1	★	C-2		
i82	12	★	B-2		Joint connector (Illumi, and backup)
i83	12	★	B-2		
i84	35	★	B-3		Body integrated unit
i85	8	★	C-4		Audio
i88	8	★	C-4		A/C control panel (Auto A/C)
i89	2	★	B-3		Box light
i96	8	★	B-5		Keyless entry control module
i97	12	★	B-5		
i98	12	★	B-5		
i99	12	★	B-5		Joint ground connector
i100	12	★	B-5		
i101	25	★	C-5	D84	Front door cord RH
i102	18	★	C-1	R167	Rear wiring harness
i110	1	Green	C-2		Diagnosis connector
i111	1	Green	C-2		

★: Non-colored

# Instrument Panel Wiring Harness

WIRING SYSTEM

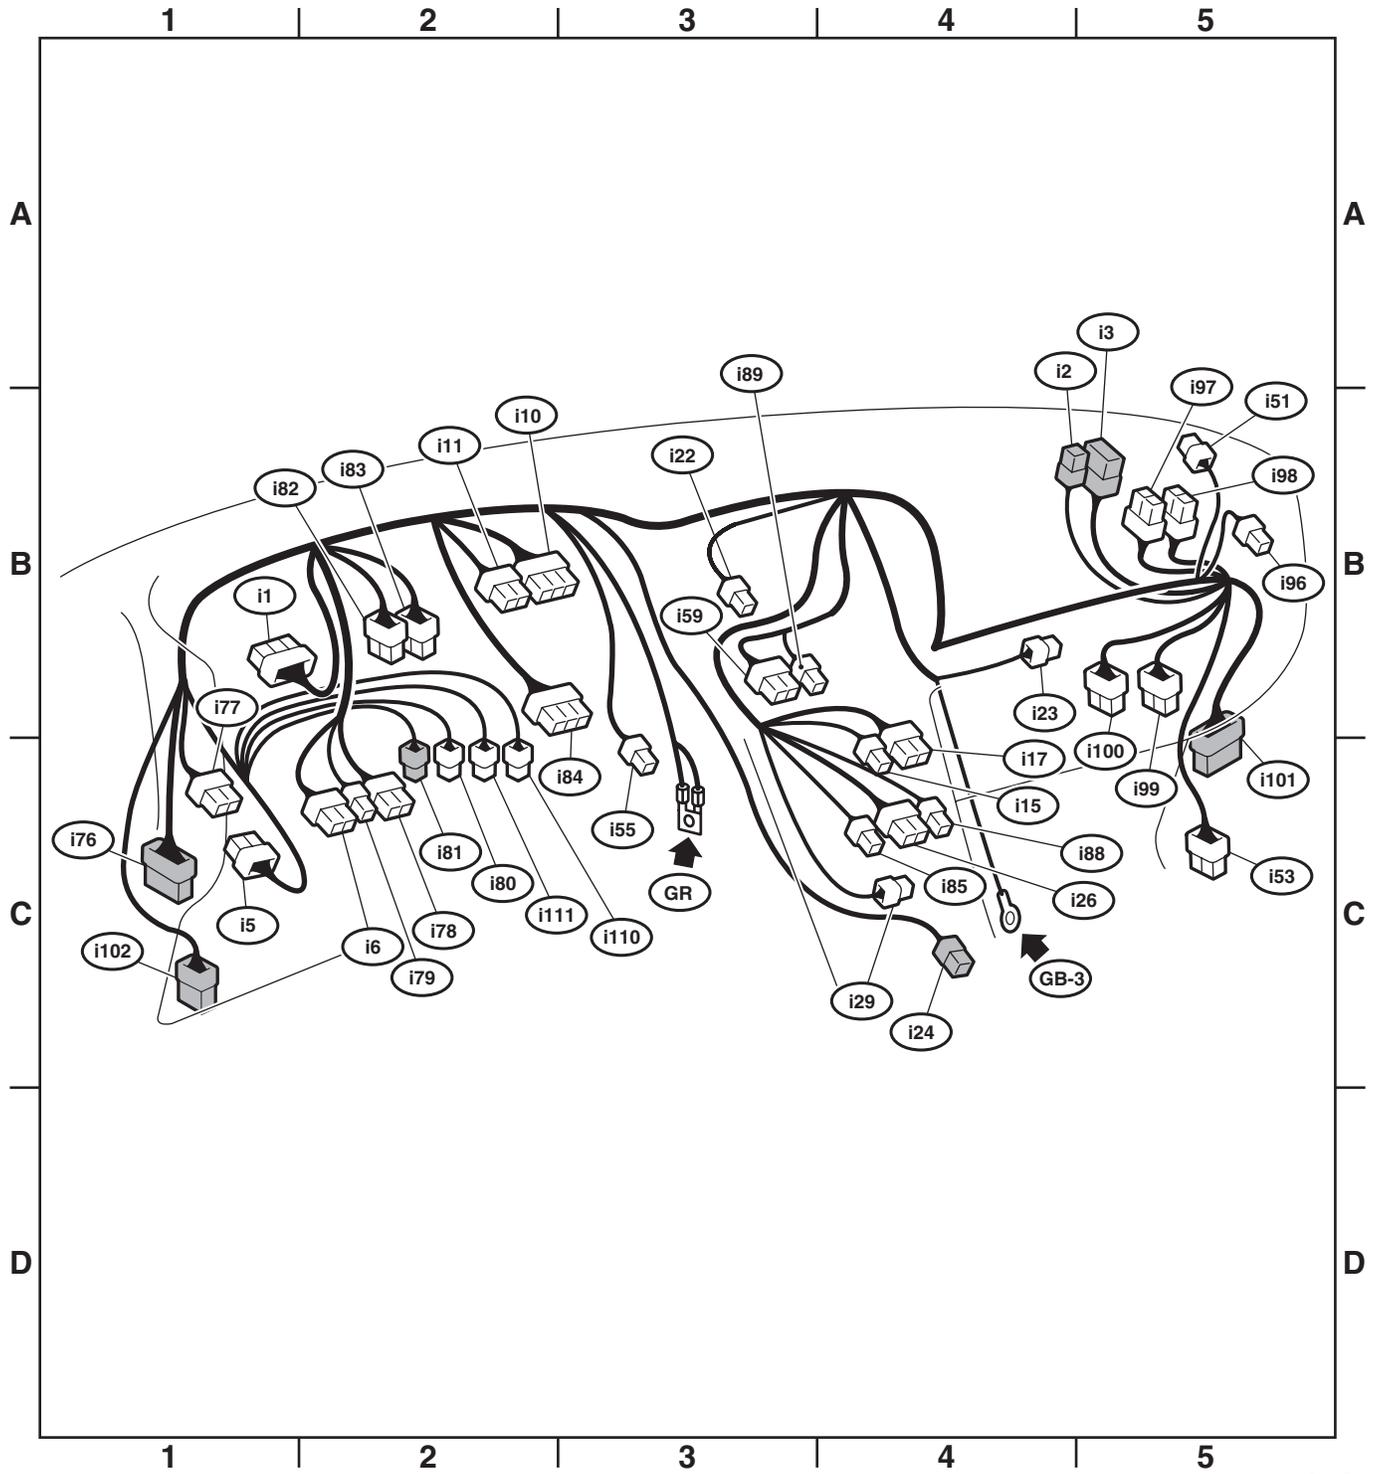

WI-05437