


6. Front Outer Handle

A: REMOVAL

- 1) Raise the front door glass to the top position.
- 2) Remove the door trim. <Ref. to EI-48, REMOVAL, Door Trim.>
- 3) Remove the cable from front inner remote. <Ref. to SL-32, REMOVAL, Front Inner Remote.>
- 4) Remove the sealing cover. <Ref. to EB-20, REMOVAL, Front Sealing Cover.>
- 5) Remove the rod clamps (1).
- 6) Remove the bolts (2), and then detach the front outer handle.

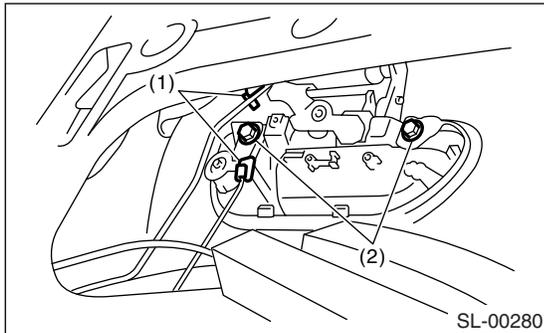

CAUTION:

Do not apply excessive force to remove the handle from door panel. Otherwise door panel may be deformed.

B: INSTALLATION

Install in the reverse order of removal.

NOTE:

Make sure the outer handle works correctly after installation.

C: INSPECTION

- 1) Check the rod for deformation.
- 2) Check the lever and rod for smooth operation.