


12. Front Accessory Power Supply Socket

A: REMOVAL


1. FRONT

- 1) Disconnect the ground cable from battery.
- 2) Remove the console front panel. <Ref. to EI-54, REMOVAL, Center Console.>
- 3) Disconnect the harness connector, and remove the accessory power supply socket.

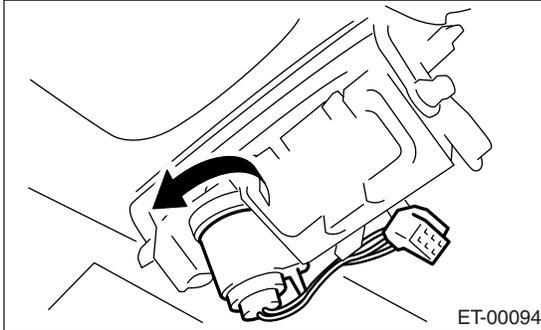

2. REAR

- 1) Disconnect the ground cable from battery.
- 2) Remove the console box. <Ref. to EI-53, REMOVAL, Console Box.>
- 3) Disconnect the harness connector, and remove the accessory power supply socket.

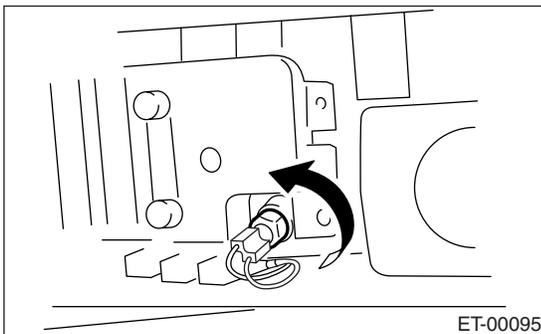

B: INSTALLATION

Install in the reverse order of removal.