


# Pressure Control Solenoid Valve

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)


## 12. Pressure Control Solenoid Valve

### A: REMOVAL


- 1) Set the vehicle on the lift.
- 2) Disconnect the battery ground cable.

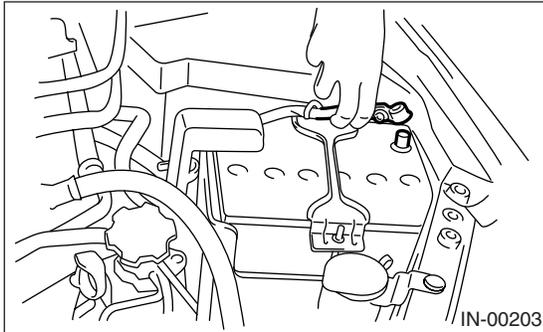

- 3) Lift-up the vehicle.
- 4) Disconnect the connector from pressure control solenoid valve.
- 5) Disconnect the evaporation hose (B) from pressure control solenoid valve.
- 6) Remove the bolt (C) which holds the bracket to fuel tank.

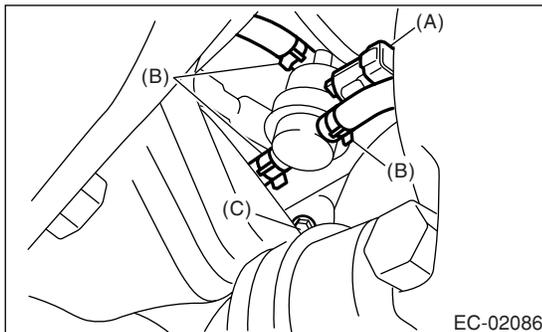

- 7) Remove the pressure control solenoid valve from bracket.

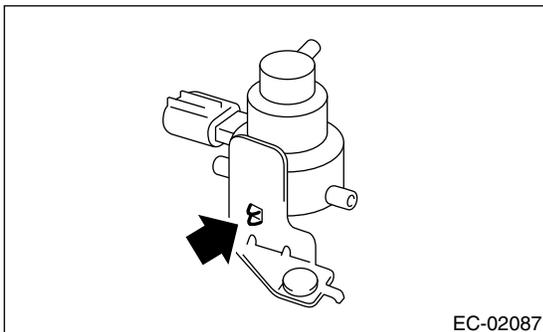

### B: INSTALLATION

Install in the reverse order of removal.

#### *Tightening torque:*

**17.6 N·m (1.8 kgf-m, 13.0 ft-lb)**

### C: INSPECTION

Make sure the hoses are not cracked or loose.