


## 10. Blower Resistor (Manual A/C Model)

### A: REMOVAL


- 1) Remove the glove box lower cover on passenger side. <Ref. to EI-51, REMOVAL, Glove Box.>
- 2) Disconnect the blower resistor connector.
- 3) Remove the two screws, and then remove the blower resistor.

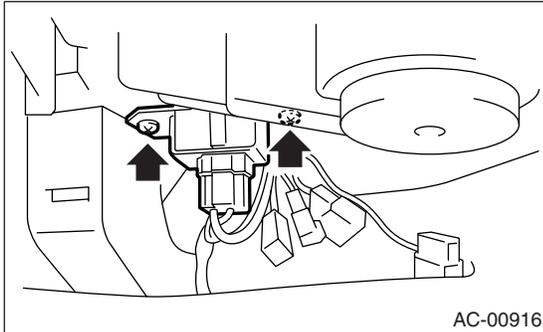

### B: INSTALLATION

Install in the reverse order of removal.

### C: INSPECTION

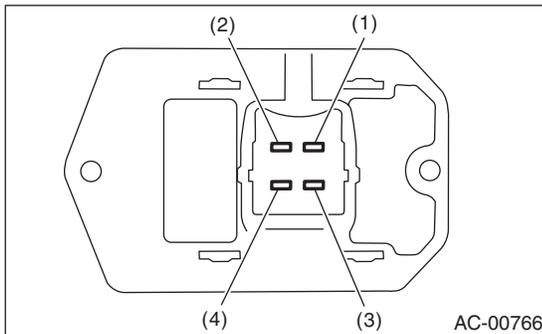

Measure the blower resistor resistance.

Terminal No.	Standard
4 and 2	Approx. 0.44 $\Omega$
4 and 3	Approx. 1.12 $\Omega$
4 and 1	Approx. 2.92 $\Omega$

If NG, replace the blower resistor.