


3. Rear Seat


A: REMOVAL

1. SEDAN MODEL


1) Remove the two hooks while lifting up the rear seat cushion.

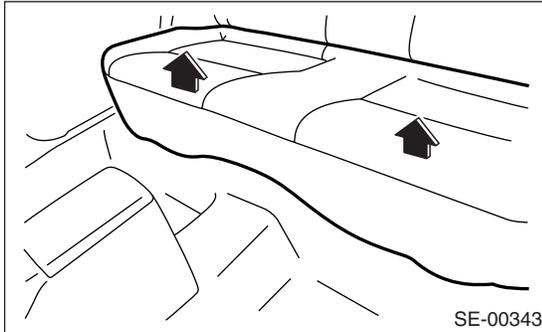


2) Remove the hook (A) by pushing it backward while lifting up the front side of seat cushion to detach seat cushion.

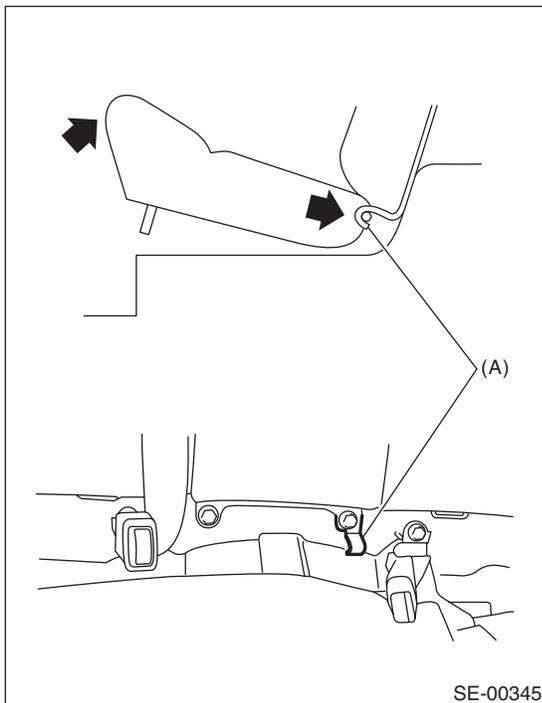


3) Remove the lower anchor bolt of rear center seat belt.

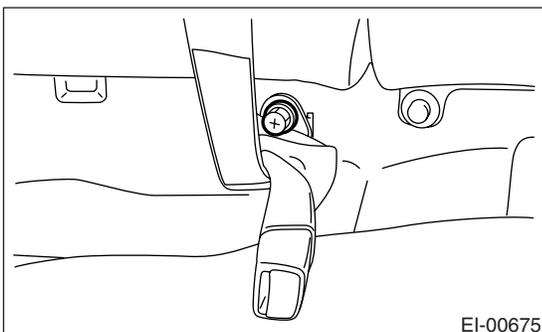

4) Remove the bolts which secure the bottom of backrest.

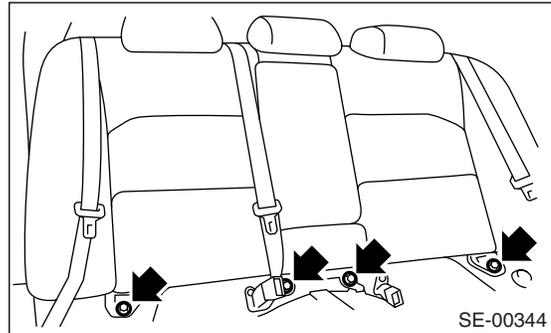


5) Remove the anchor part on backrest side from the hook on body side (A) while lifting up the backrest to detach it from vehicle.

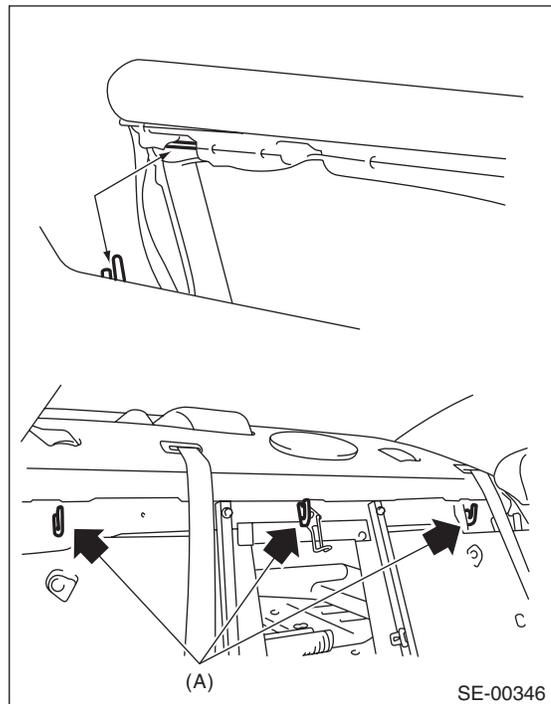

2. WAGON MODEL

1) Disconnect the ground cable from battery.


2) Remove the two hooks while lifting up the rear seat cushion.

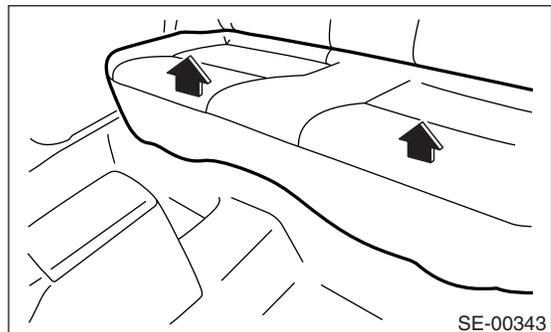

Rear Seat

SEATS


3) Remove the hook (A) by pushing it backward while lifting up the front side of seat cushion to detach seat cushion.

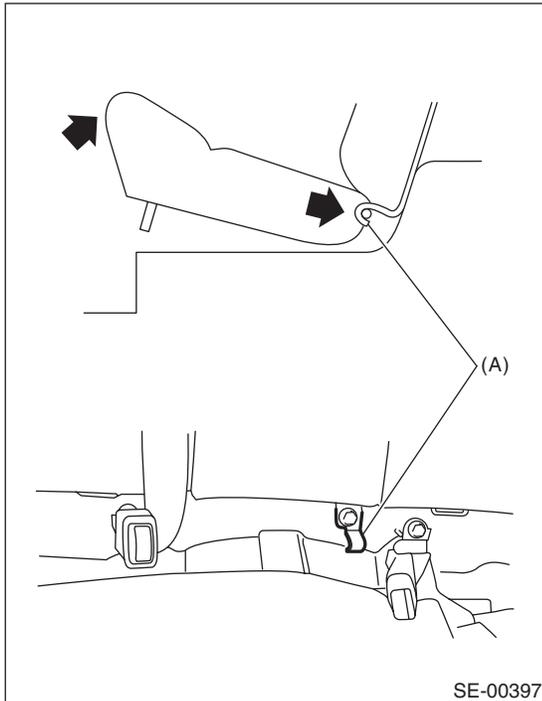


4) Remove the headrest, and then tilt the backrest forward.

5) Remove the luggage floor box. <Ref. to EI-73, REMOVAL, Luggage Floor Box.>

6) Remove the hinge assembly center bolts.

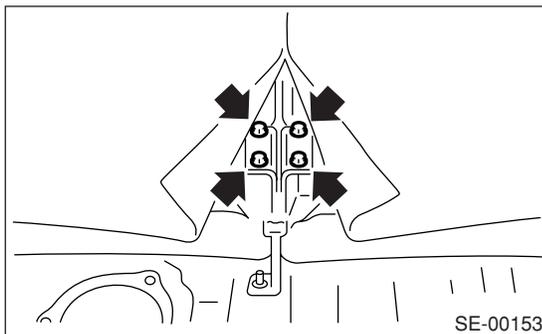


7) Remove the backrest from hinge assembly LH (hinge assembly RH).

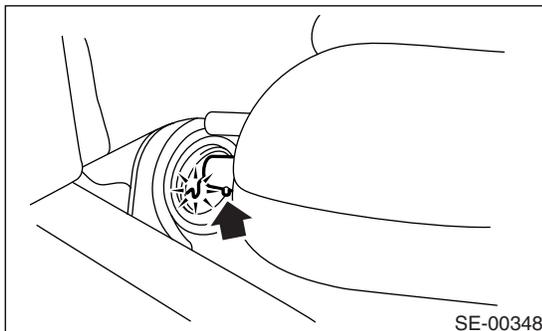


NOTE:

The backrest cannot be detached when the hinge assembly side does not mate with the backrest pin position.


8) Remove the lower anchor bolt (A) of outer seat belt and backrest shoulder bolt (B).

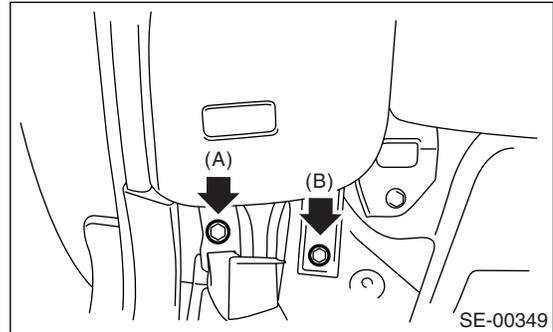

9) Remove the backrest shoulder with lifting it up.

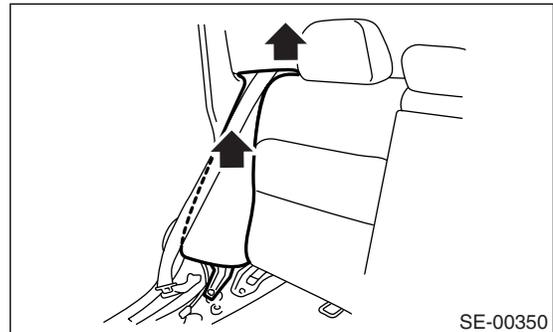

10) Remove the belt cover (A) from backrest shoulder cover, and then pull out the seat belt.

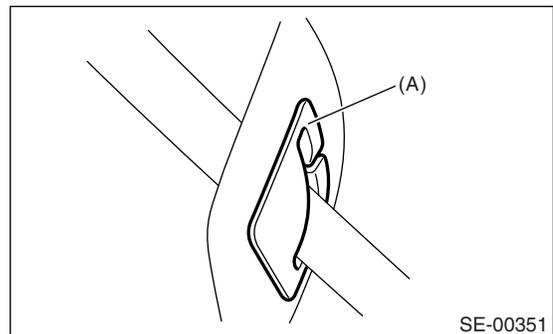

B: INSTALLATION

1. SEDAN MODEL

Install in the reverse order of removal.

NOTE:

- After installing the backrest, make sure that each seat belt operates normally.
- Make sure that they are secured on each hook of vehicle side.

Tightening torque:

Refer to “COMPONENT” of “General Description”. <Ref. to SE-6, REAR SEAT (SEDAN MODEL), COMPONENT, General Description.>

2. WAGON MODEL

Install in the reverse order of removal.

NOTE:

- After installing the backrest, make sure that each seat belt operates normally.
- Make sure that they are secured on each hook of vehicle side.


Tightening torque:

Refer to “COMPONENT” of “General Description”. <Ref. to SE-7, REAR SEAT (WAGON MODEL), COMPONENT, General Description.>


C: DISASSEMBLY

1. SEDAN MODEL


- 1) Remove the rear seat. <Ref. to SE-19, SEDAN MODEL, REMOVAL, Rear Seat.>
- 2) Remove the headrest.
- 3) Remove the nuts, and then detach the trunk through assembly.

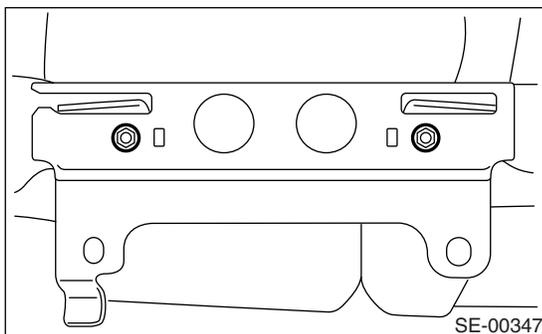


- 4) Remove the hog rings (A) on the rear side of backrest.

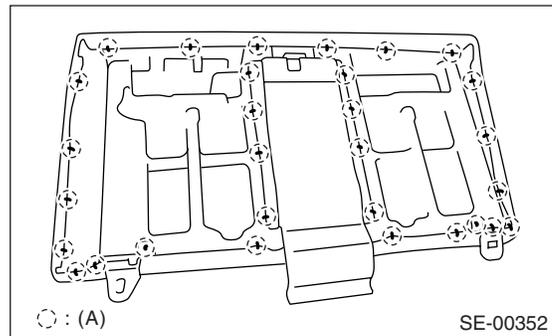


- 5) Remove the hog rings (A) on the front side of backrest.

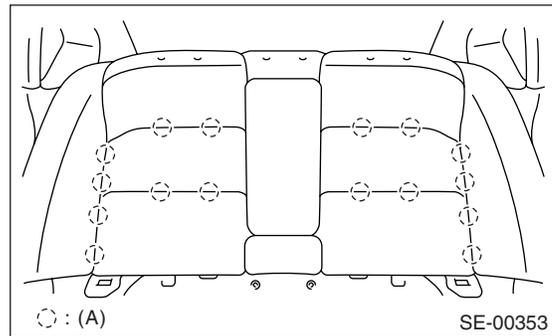

- 6) Remove both sides of armrest hinge covers, and loosen the screws to remove armrest.

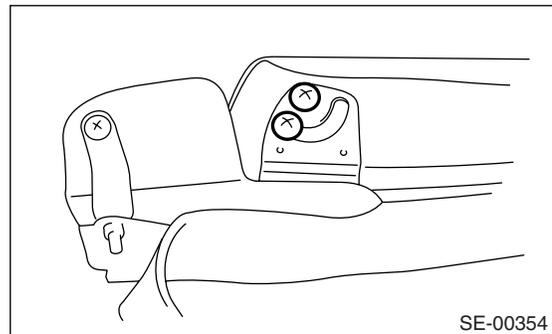


- 7) Remove the hook, and then detach the center through cover.

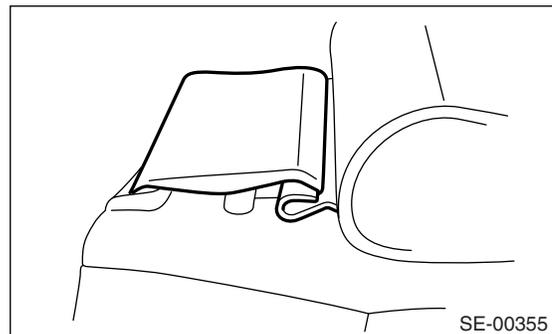


Rear Seat

SEATS


8) Remove the hook, and then remove the armrest cover.

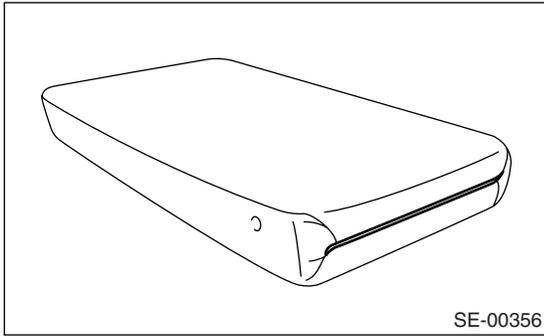


9) Remove the hook and hog ring, and then remove the headrest cover.

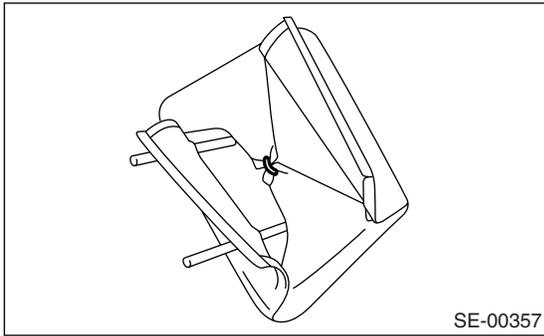

10) Remove the hog rings (A) on the rear side of seat cushion.

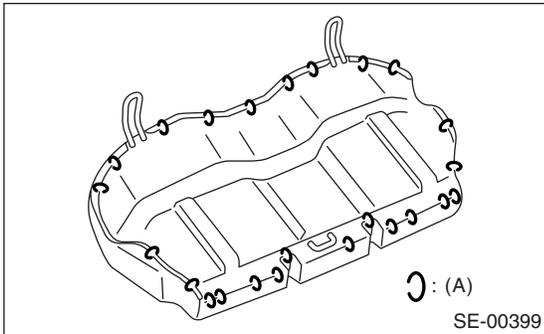


11) Remove the hog rings (A), and then remove the seat cushion cover.

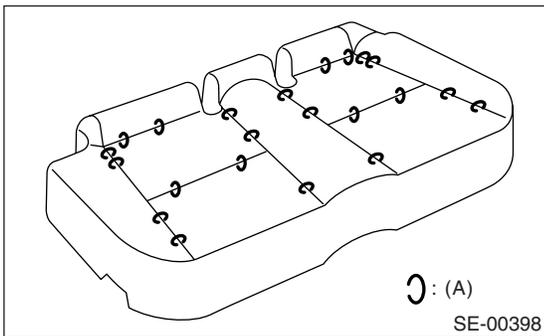


2. WAGON MODEL

1) Remove the rear seat. <Ref. to SE-19, WAGON MODEL, REMOVAL, Rear Seat.>


2) Remove the hooks at the bottom of backrest assembly LH, and then turn over the backrest cover to remove the hog rings (A) and hooks (B).

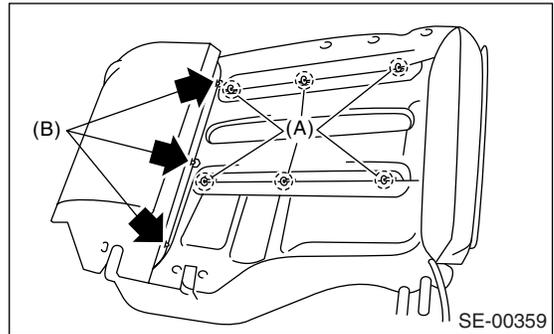


3) Remove the hog rings (A) on the front side of backrest, and then remove the backrest cover.

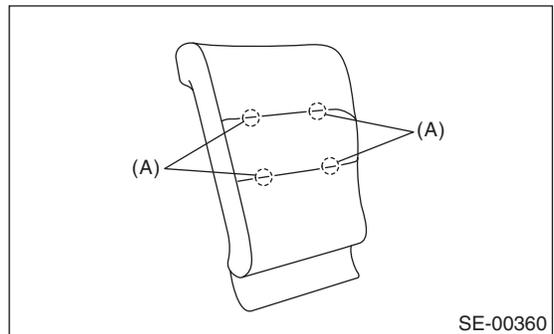

4) Remove the bolts, and then remove the backrest latch.

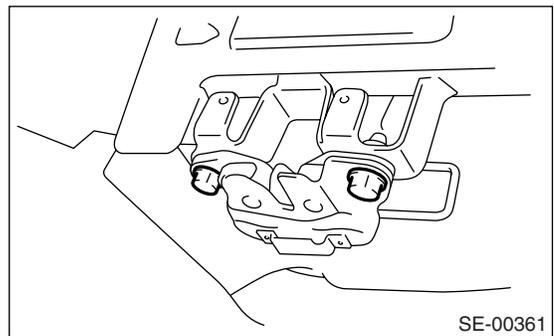

5) Loosen the screws to remove the armrest from backrest assembly RH.

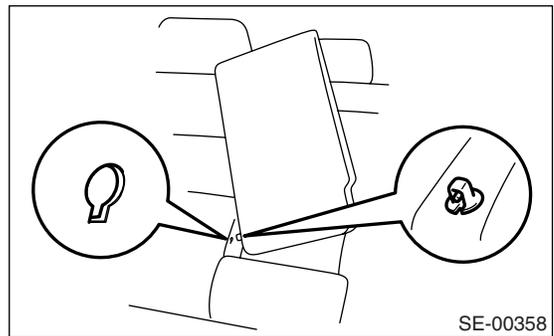


NOTE:


Armrest cannot be removed when backrest assembly RH side does not mate with armrest side pin position.

6) After this operation, refer to the step 2) to disassemble backrest assembly RH.


7) Remove the hook, and then remove the armrest cover.

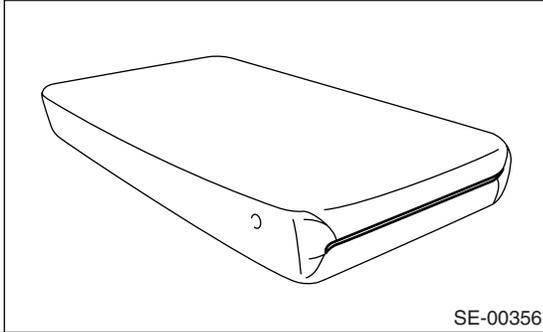


8) Remove the hook and hog ring, and then remove the headrest cover.

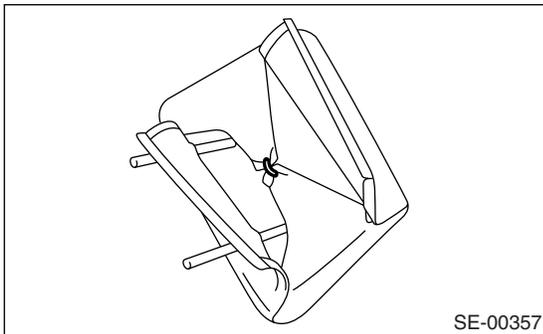

9) Remove the hog rings (A) on the rear side of seat cushion.

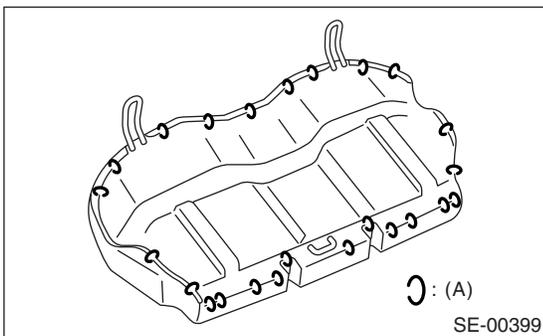

10) Remove the hog rings (A), and then remove the seat cushion cover.

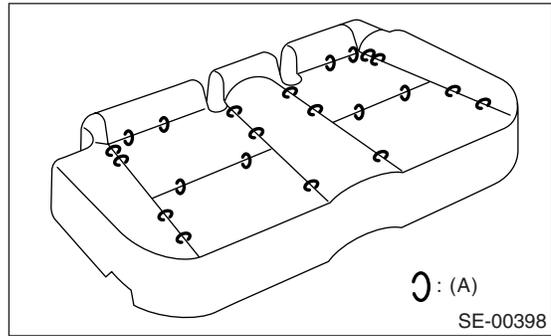

D: ASSEMBLY

Assemble in the reverse order of disassembly.

NOTE:

- Do not contaminate or damage the cover.
- While installing the hog rings, prevent the seat from getting wrinkled.

CAUTION:

- **Always use new hog rings.**
- **Secure the hog ring using hog ring pliers.**
- **Install the hog rings to the specified points securely and be sure to prevent backrest cover from wrinkle or twisting.**

E: INSPECTION

Check that no tear or fray on the seat cover.