



## 27. Assist Grip

### A: REMOVAL

- 1) Remove the screw cover, and remove the screw inside.
- 2) Pull the left side of assist grip toward you, and rotate the right side of it counterclockwise to remove.

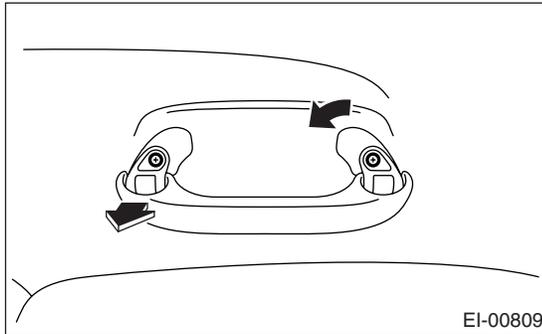

- 3) Remove the roof trim. <Ref. to EI-66, REMOVAL, Roof Trim.>
- 4) Remove the bolts, and remove the assist grip bracket.

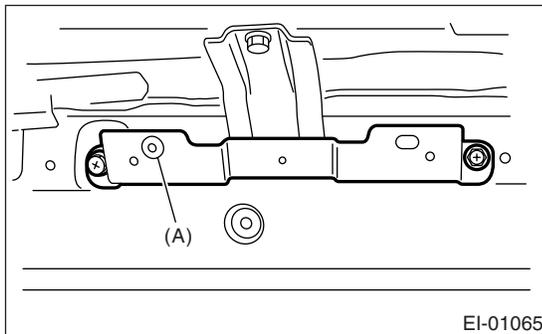

(A) Grommet

### B: INSTALLATION

Install in the reverse order of removal.

#### CAUTION:

**Be sure to install the grommet to assist grip bracket.**

**When install the assist grip without grommet, it may cause the faulty returning.**