

# PCV Hose Assembly

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)


## 16.PCV Hose Assembly

### A: REMOVAL

#### CAUTION:

**Do not remove the PCV hose assembly except when the PCV hose, diagnosis connector or PCV valve is damaged.**

- 1) Remove the intake manifold.  
<Ref. to FU(H4DOTC)-12, REMOVAL, Intake Manifold.>
  - 2) Clip the protrusion of clamp by aligning it with the concave portion of ST to unlock.
  - 3) Remove the PCV hose assembly.
- ST 18353AA000 CLAMP PLIERS

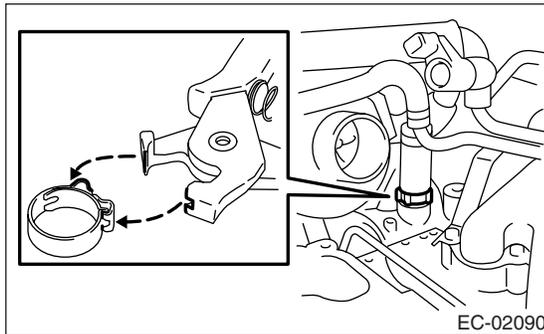


### B: INSTALLATION

#### NOTE:

Replace the clamp with a new one.

- 1) Install the PCV hose assembly, and then lock the clamp by clipping the protrusion of clamp using ST.
- ST 18353AA000 CLAMP PLIERS

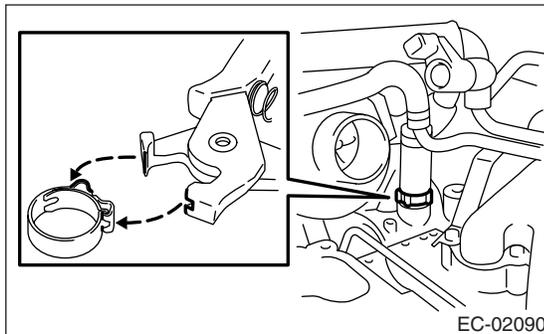

- 2) Install the intake manifold.  
<Ref. to FU(H4DOTC)-14, INSTALLATION, Intake Manifold.>