


LOCATIONS OF WARNING AND CAUTION LABELS

AIRBAG SYSTEM


4. Locations of Warning and Caution Labels

1. AIRBAG CONTROL MODULE

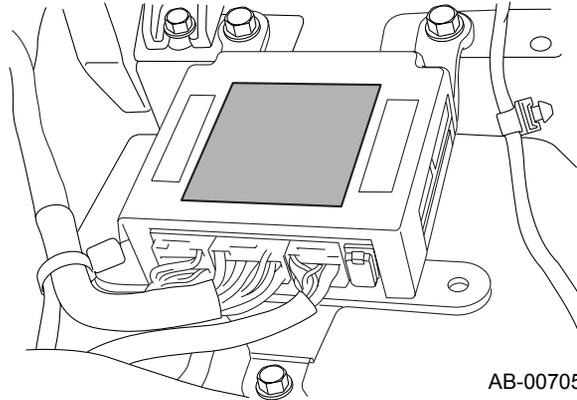


AB-00705

2. DRIVER'S SEAT AIRBAG MODULE

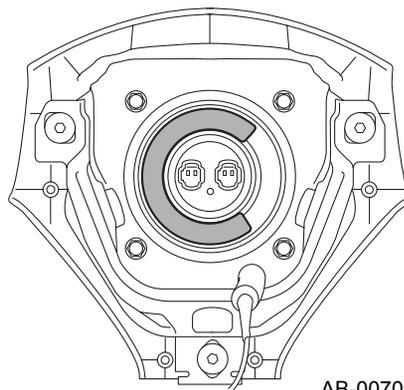

AB-00706

3. STEERING ROLL CONNECTOR

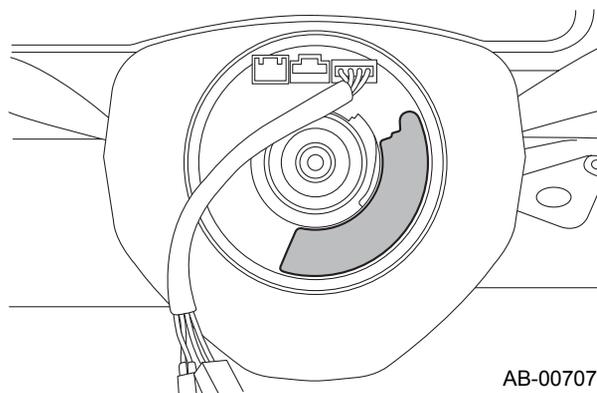


AB-00707

LOCATIONS OF WARNING AND CAUTION LABELS


AIRBAG SYSTEM

4. PASSENGER'S SEAT AIRBAG MODULE

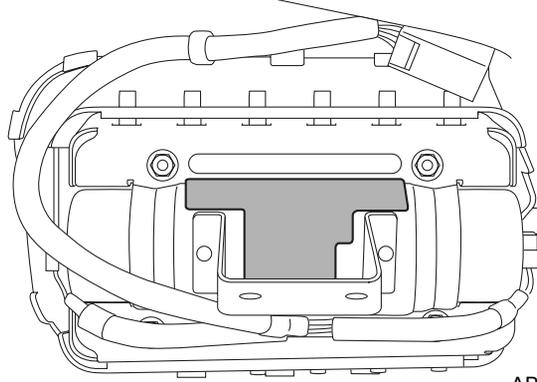


AB-00708

5. FRONT SUB SENSOR

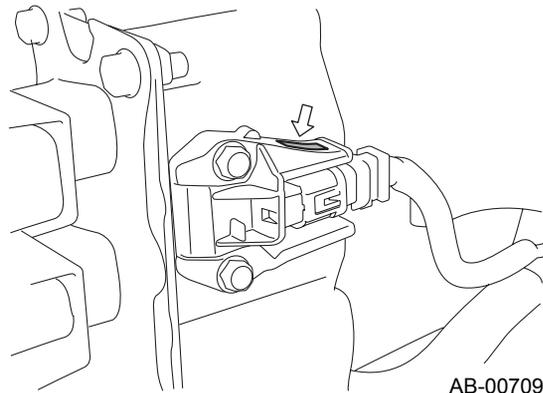

AB-00709

6. SIDE IMPACT SENSOR

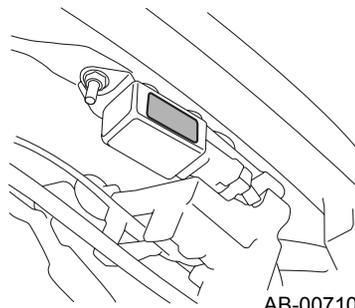


AB-00710

LOCATIONS OF WARNING AND CAUTION LABELS


AIRBAG SYSTEM

7. SIDE AIRBAG MODULE

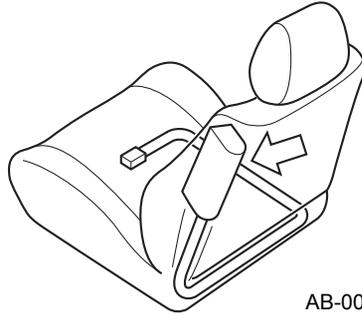


AB-00711

8. CURTAIN AIRBAG MODULE

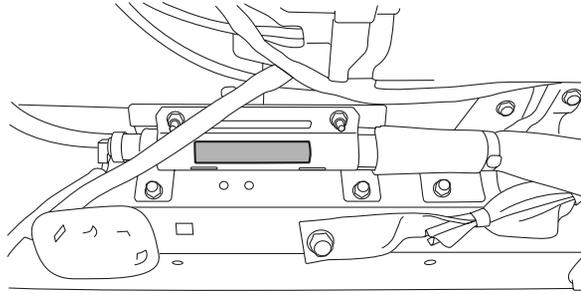

AB-00712

9. CENTER PILLAR LOWER AREA

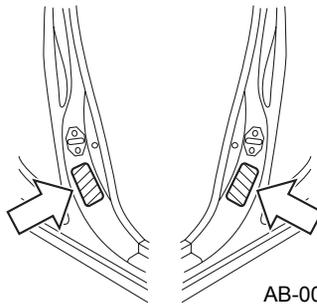


AB-00713

LOCATIONS OF WARNING AND CAUTION LABELS


AIRBAG SYSTEM

10. SEAT BELT PRETENSIONER

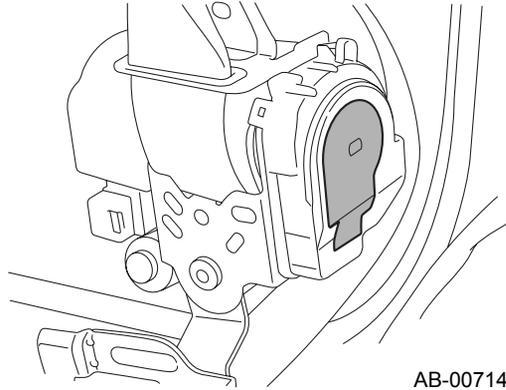


AB-00714

11. SUN VISOR

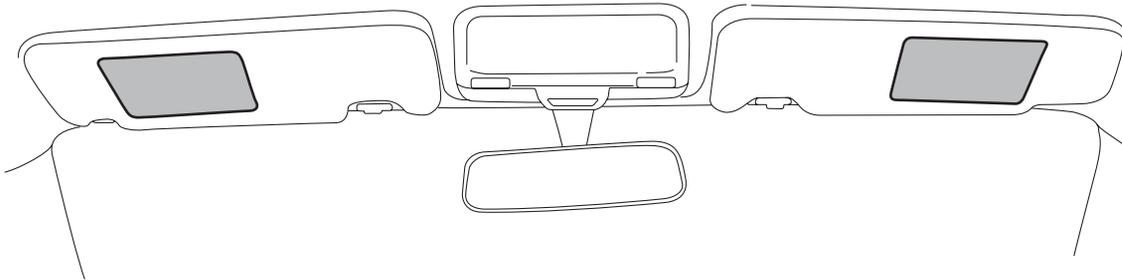

AB-00950

12. INSTRUMENT PANEL

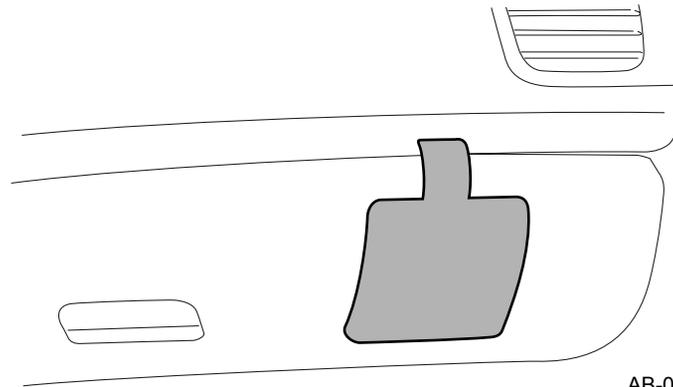

AB-00951