


## 9. Rear Inner Remote

### A: REMOVAL

- 1) Remove the rear door trim. <Ref. to EI-48, REMOVAL, Door Trim.>
- 2) Remove the back cover (1) of inner remote.
- 3) Remove the cable (2).
- 4) Remove the cable end ball (3).
- 5) Remove the screws (4), and detach the inner remote handle.

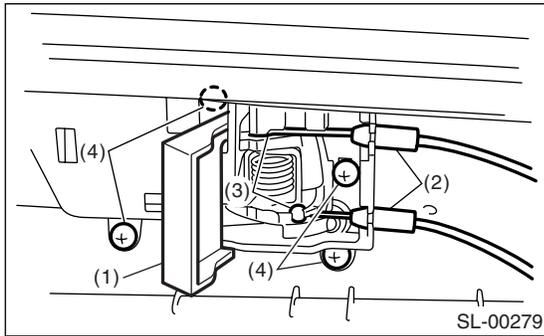

### B: INSTALLATION

Install in the reverse order of removal.

#### NOTE:

Make sure the inner remote works correctly after installation.

### C: INSPECTION

- 1) Check the cable for deformation. When it is deformed, straighten it because failure operations may occur. When it is unrepairable, replace the rear door latch & door lock actuator assembly.
- 2) Check the handle and cable for smooth operation.
- 3) Check the child safety lock for correct operations.