

## 5. Floor Under Protector


### A: REMOVAL

1) Lift-up the vehicle.

NOTE:

Plate type lift can not be used.

2) Remove the push turn clips (A) and bolts (B), and remove the floor under protector.

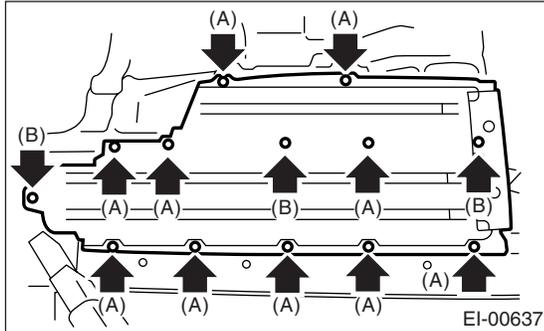

### B: INSTALLATION

Install in the reverse order of removal.