


# Starter System

WIRING SYSTEM

## 18. Starter System

### A: WIRING DIAGRAM

#### 1. 2.5 L NON-TURBO MODEL

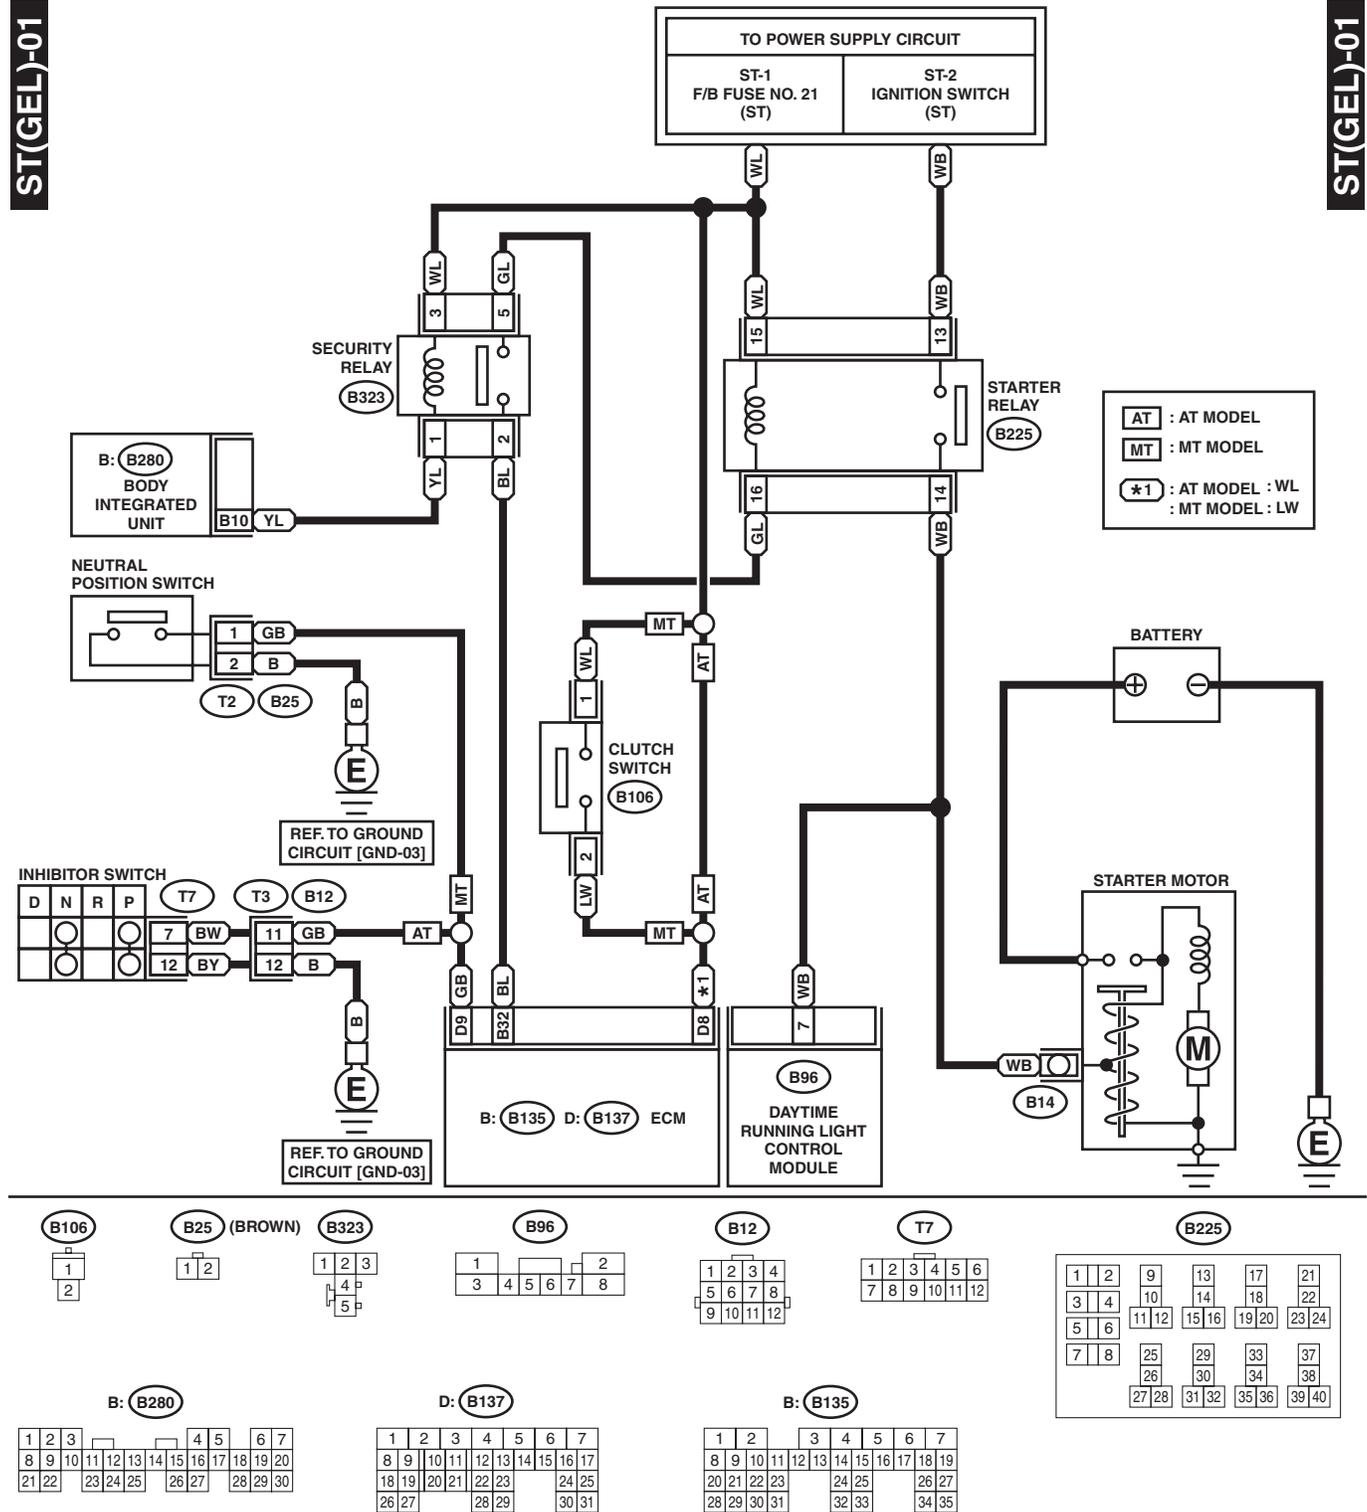

WI-05403


# Starter System

WIRING SYSTEM


## 2. 2.5 L TURBO MODEL AND 3.0 L MODEL

ST(EUL)-01

ST(EUL)-01

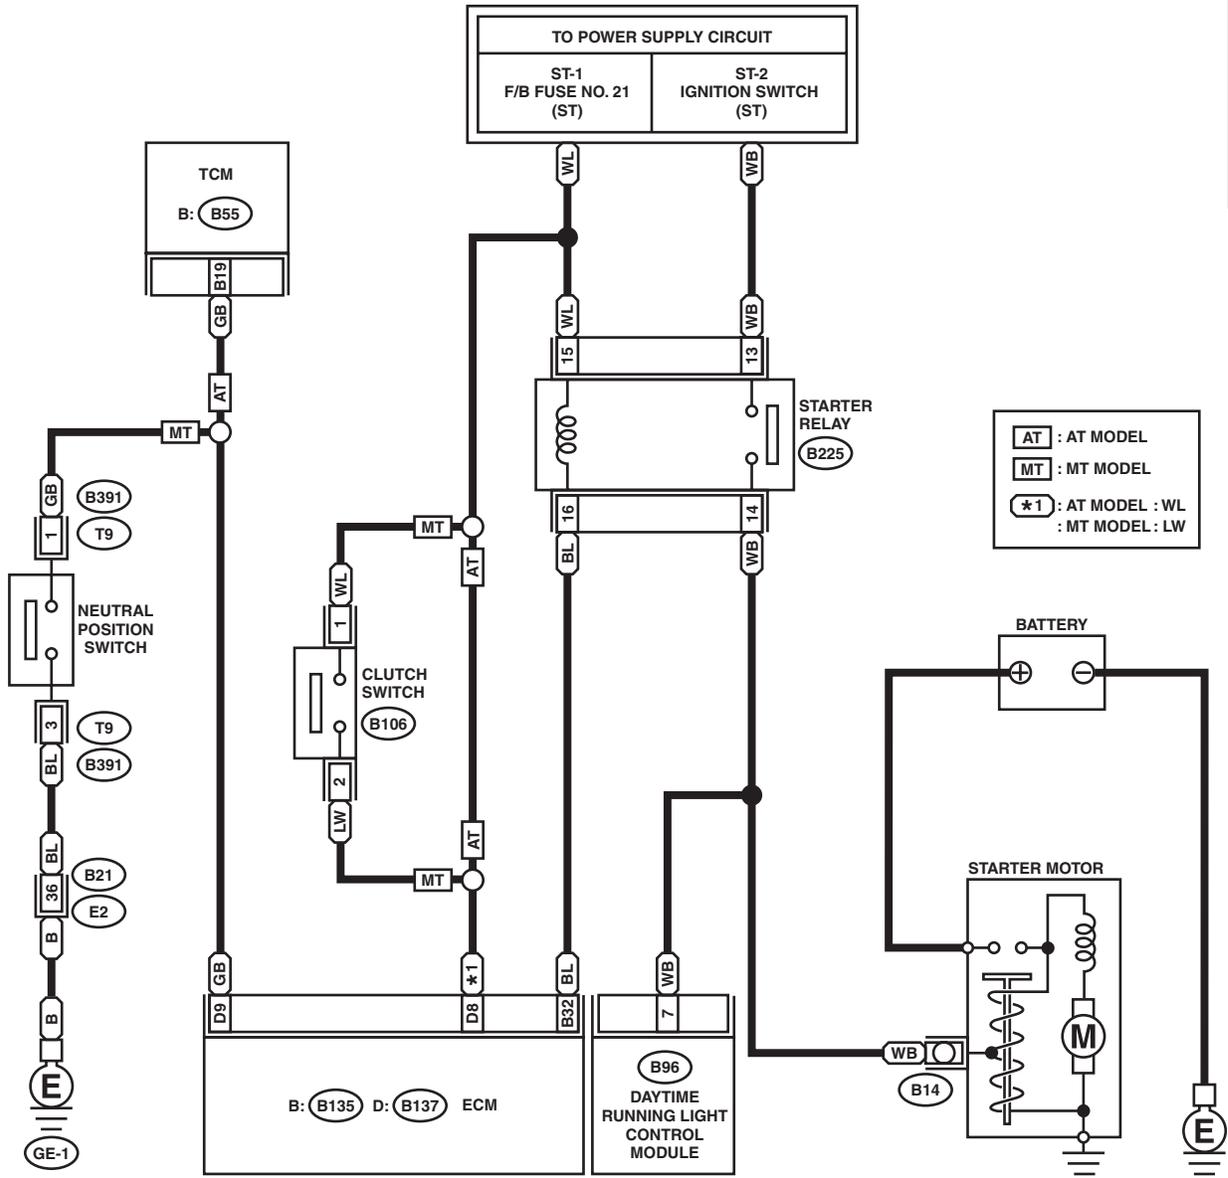

AT : AT MODEL  
 MT : MT MODEL  
 \*1 : AT MODEL : WL  
       : MT MODEL : LW

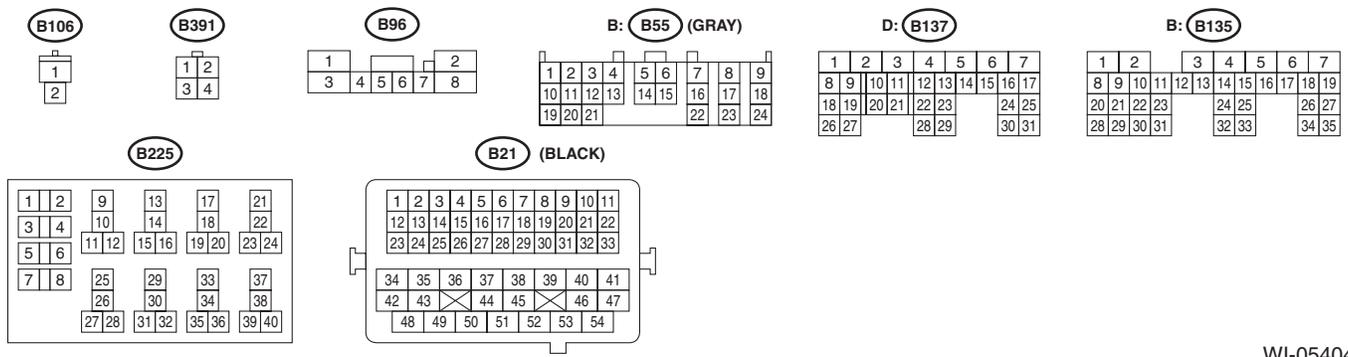

WI-05404