


11. Coolant Filler Tank

A: REMOVAL

WARNING:

The radiator is pressurized. Wait until engine cools down before working on the radiator.

- 1) Remove the collector cover.
- 2) Drain the coolant about 3.0 ℓ (3.2 US qt, 2.6 Imp qt). <Ref. to CO(H4DOTC)-13, DRAINING OF ENGINE COOLANT, REPLACEMENT, Engine Coolant.>
- 3) Disconnect the engine coolant hoses from coolant filler tank.
- 4) Remove the bolts which install the coolant filler tank.
- 5) Disconnect the engine coolant hose which connects the under side of coolant filler tank.
- 6) Remove the coolant filler tank.

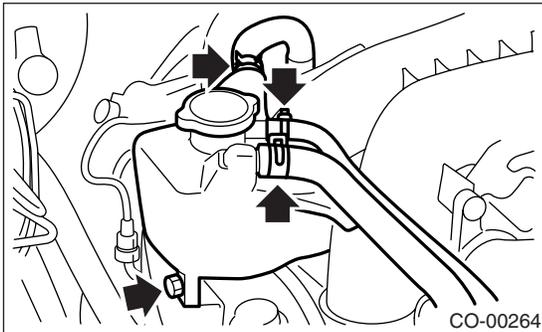


B: INSTALLATION

- 1) Install in the reverse order of removal.

Tightening torque:

16 N·m (1.6 kgf-m, 11.8 ft-lb)

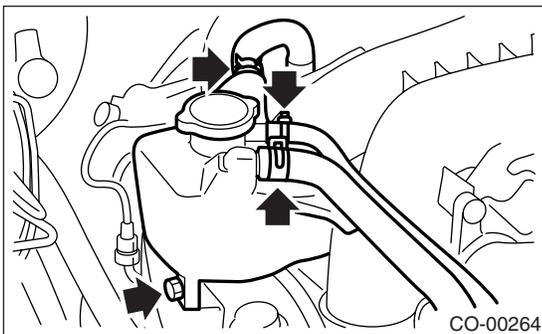

- 2) Fill with engine coolant. <Ref. to CO(H4DOTC)-13, FILLING OF ENGINE COOLANT, REPLACEMENT, Engine Coolant.>