



## 9. Mass Air Flow and Intake Air Temperature Sensor

### A: REMOVAL

- 1) Disconnect the ground cable from battery.

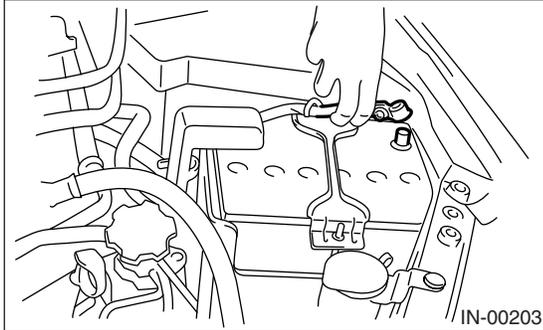

- 2) Disconnect the connector from mass air flow and intake air temperature sensor.
- 3) Remove the mass air flow and intake air temperature sensor.

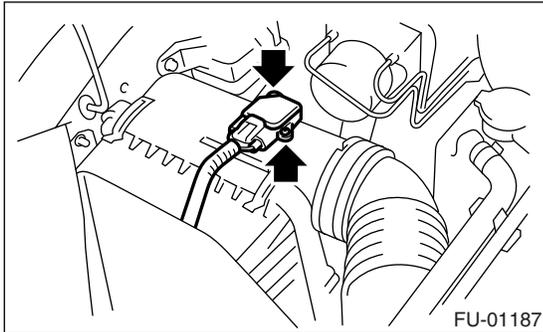

### B: INSTALLATION

Install in the reverse order of removal.

#### *Tightening torque:*

**1 N·m (0.1 kgf·m, 0.7 ft·lb)**