


Front Door Latch & Door Lock Actuator Assembly

SECURITY AND LOCKS

7. Front Door Latch & Door Lock Actuator Assembly

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the front door trim. <Ref. to EI-48, REMOVAL, Door Trim.>
- 3) Remove the cable from front inner remote. <Ref. to SL-32, REMOVAL, Front Inner Remote.>
- 4) Remove the sealing cover. <Ref. to EB-20, REMOVAL, Front Sealing Cover.>
- 5) Remove the front door glass. <Ref. to GW-11, REMOVAL, Front Door Glass.>
- 6) Remove the rear sash. <Ref. to GW-16, REMOVAL, Front Regulator and Motor Assembly.>
- 7) Open the handle rod cover of latch assembly.
- 8) Remove the three screws.

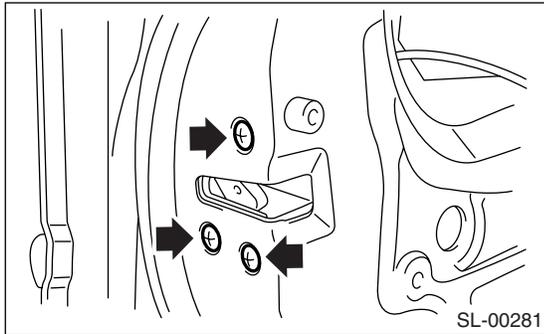

- 9) Remove the front door latch & door lock actuator assembly, and disconnect the connector.

B: INSTALLATION

Install in the reverse order of removal.

NOTE:

Make sure the lock works correctly after installation.

C: INSPECTION

- 1) Check the rod and cable for deformation. When it is deformed, straighten it because failure operations may occur. When it is unrepairable, replace the front door latch & door lock actuator assembly.
- 2) Check the lever, rod and cable for smooth operation.