

## 13. Transmission Gear Oil


### A: REPLACEMENT

#### 1. MANUAL TRANSMISSION

1) Drain the gear oil by removing drain plug.

**NOTE:**

- Before starting work, cool off the transmission gear oil well.
- If transmission gear oil adheres to the exhaust pipe, wipe it off completely.

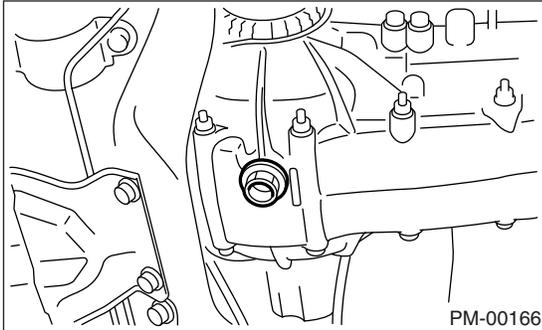

2) Replace the gasket with new one, and then tighten the drain plug to specified torque.

**Tightening torque:**

**69 N·m (7.0 kgf·m, 50.6 ft·lb)**

3) Fill the transmission gear oil through the oil level gauge hole up to the upper point of level gauge.

**Recommended gear oil:**


**Refer to “RM” section. <Ref. to RM-2, LUBRICANTS, RECOMMENDED MATERIALS, Recommended Materials.>**

**NOTE:**

Each oil manufacturer has its base oil and additives. Thus, do not mix two or more brands.

**Gear oil capacity:**

**3.5 ℓ (3.7 US qt, 3.1 Imp qt)**

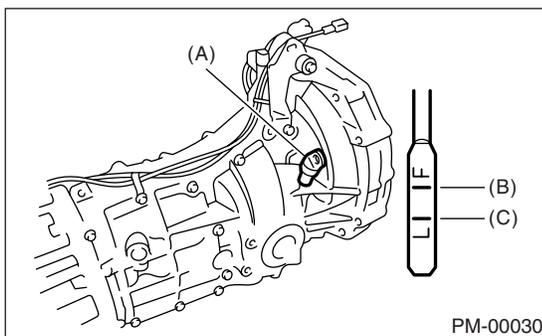

- (A) Oil level gauge
- (B) Upper level
- (C) Lower level