


20.Engine Control Module (ECM)

Tightening torque:

5 N·m (0.5 kgf-m, 3.6 ft-lb)

A: REMOVAL

1) Disconnect the ground cable from battery.

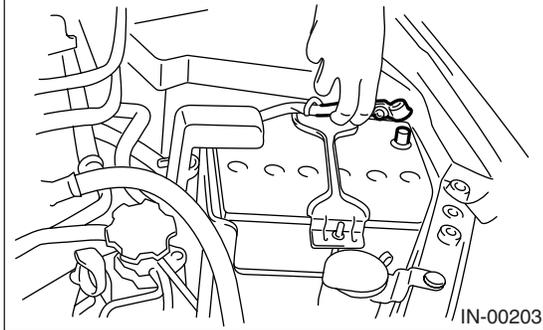


2) Remove the lower inner trim of passenger side.

<Ref. to EI-60, REMOVAL, Lower Inner Trim.>


3) Detach the floor mat of front passenger's seat.

4) Remove the protect cover.

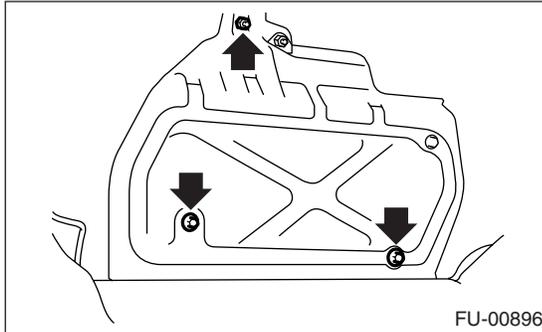

5) Remove the nut and bolt which hold the ECM to bracket.

6) Remove the clip (A) from bracket.

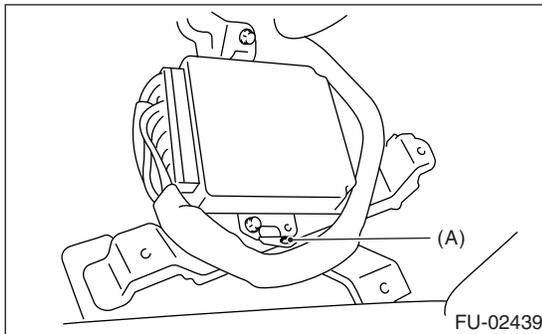

7) Disconnect the ECM connectors and take out the ECM.

B: INSTALLATION

Install in the reverse order of removal.

CAUTION:

- When replacing the ECM, be careful not to use the wrong spec. ECM to avoid any damage to the fuel injection system.
- When replacing the ECM, be careful not to damage the harnesses and connectors.