

# Camshaft Position Sensor


FUEL INJECTION (FUEL SYSTEMS)

---


## 6. Camshaft Position Sensor

### A: REMOVAL

- 1) Remove the collector cover.
- 2) Disconnect the ground cable from battery.

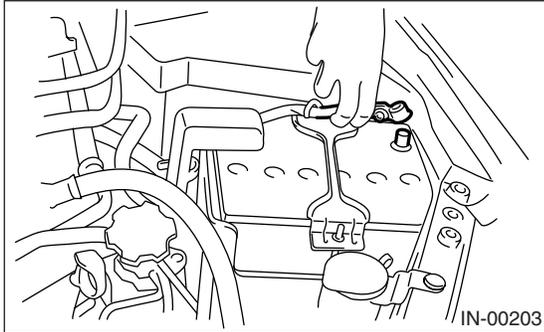

- 3) Disconnect the connector from camshaft position sensor RH.
- 4) Remove the camshaft position sensor RH from the rear side of cylinder head.

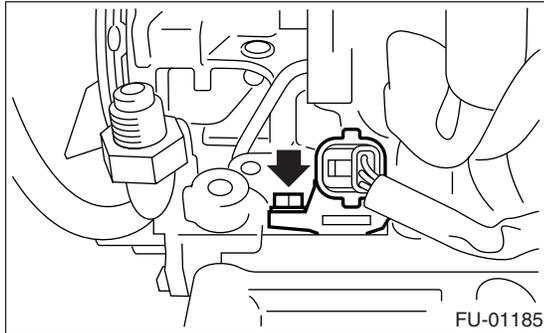

- 5) Remove the camshaft position sensor LH in the same procedure as RH.

### B: INSTALLATION

Install in the reverse order of removal.

#### **Tightening torque:**

**6.4 N·m (0.65 kgf-m, 4.7 ft-lb)**