

Front Under Cover


EXTERIOR/INTERIOR TRIM

4. Front Under Cover


A: REMOVAL

- 1) Lift-up the vehicle.
- 2) Remove the clips (A) in front fender and bolts (B), and then remove the front under cover.

- Large type

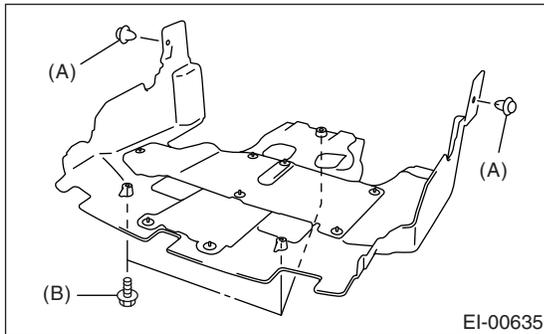

- Small type

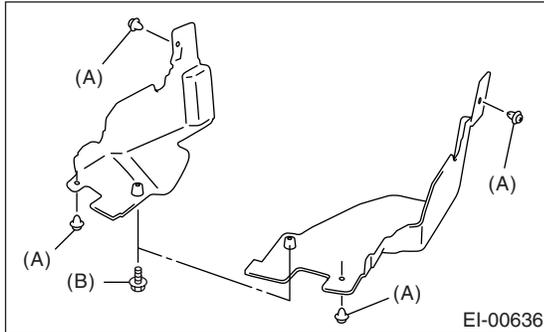

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

14 N·m (1.42 kgf·m, 10.3 ft·lb)