


16. Roof Rail

A: REMOVAL

- 1) Remove the roof trim. <Ref. to EI-66, REMOVAL, Roof Trim.>
- 2) Remove the six nuts.

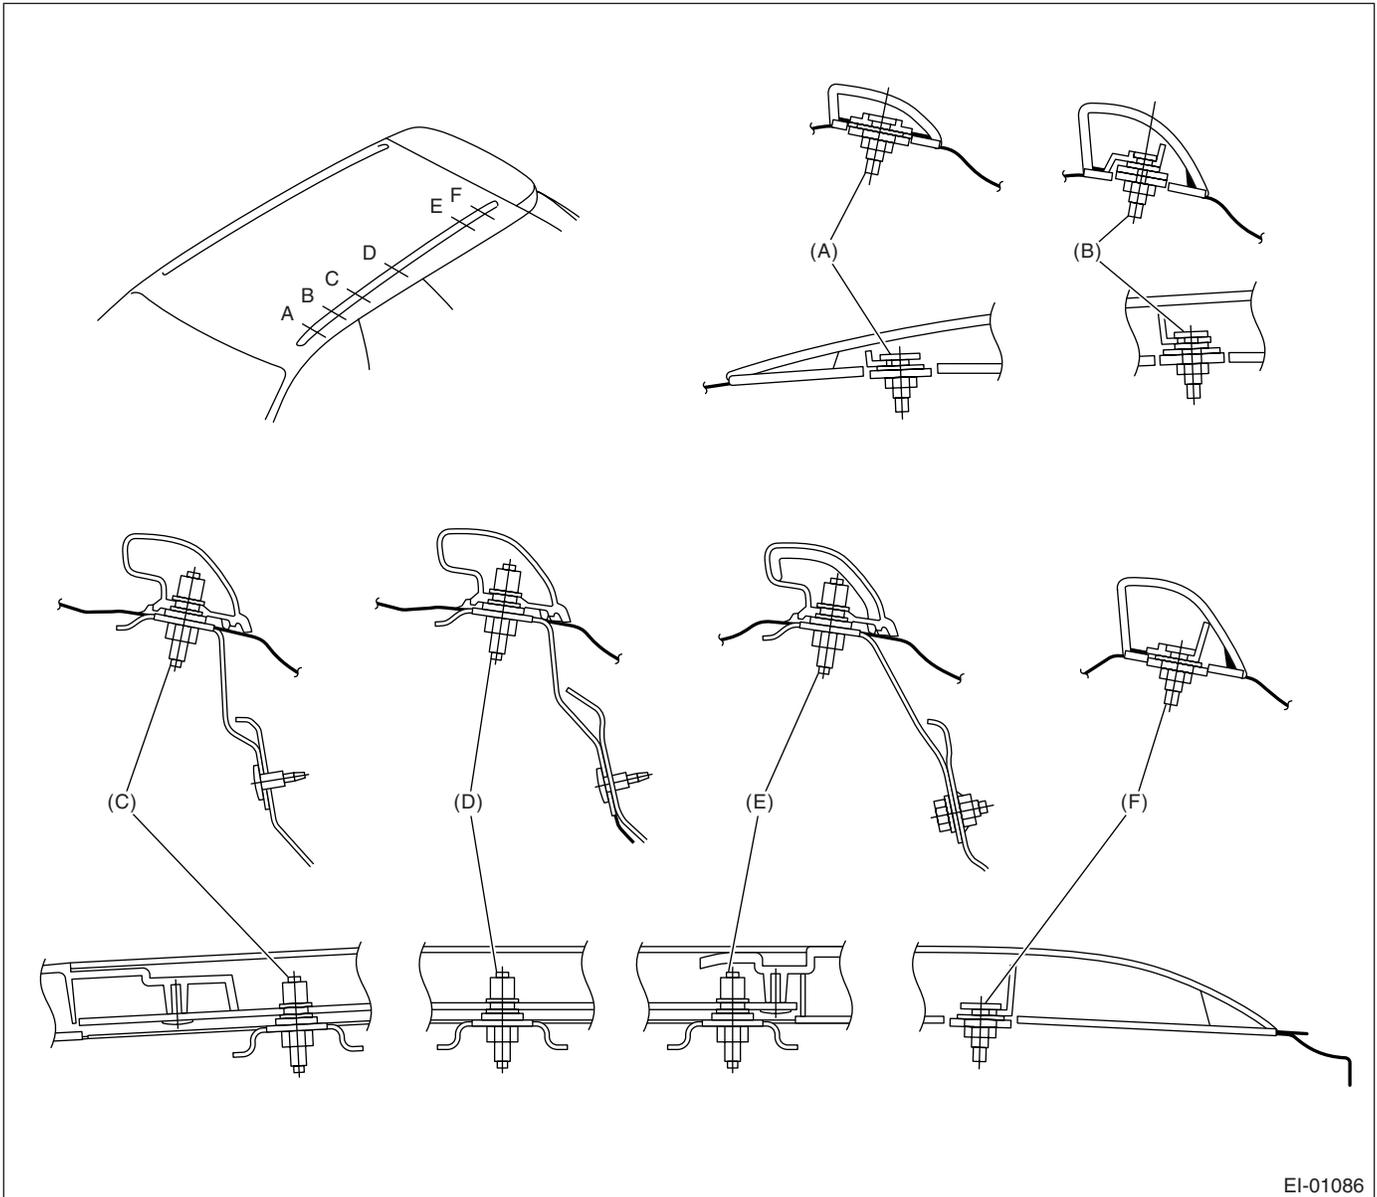

EI-01086

NOTE:

Perform the removing procedures by referring to above illustration. (OUTBACK model)

B: INSTALLATION

Install in the reverse order of removal.

CAUTION:

When removing or installing the roof rail, be careful not to scratch the body panel with the stud bolt of roof rail.

Tightening torque:

7.5 N·m (0.76 kgf-m, 5.53 ft-lb)