



## 6. Intake Duct

### A: REMOVAL

- 1) Remove the collector cover.
- 2) Disconnect the ground cable from battery.

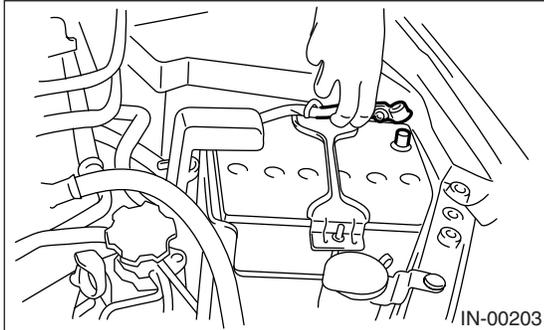

- 3) Remove the intake manifold. <Ref. to FU(H4DOTC)-12, REMOVAL, Intake Manifold.>
- 4) Remove the sensor, engine harness and fuel pipe attached to the intake manifold. <Ref. to FU(H4DOTC)-16, DISASSEMBLY, Intake Manifold.>
- 5) Remove the intake duct from intake manifold.

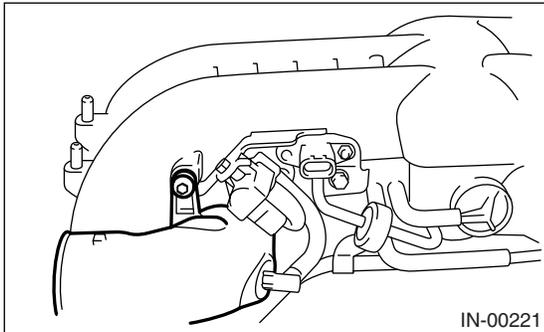

### B: INSTALLATION

Install in the reverse order of removal.

#### **Tightening torque:**

**19 N·m (1.9 kgf·m, 13.7 ft·lb)**

