


Electrical Component Location

ABS (DIAGNOSTICS)

4. Electrical Component Location

A: LOCATION

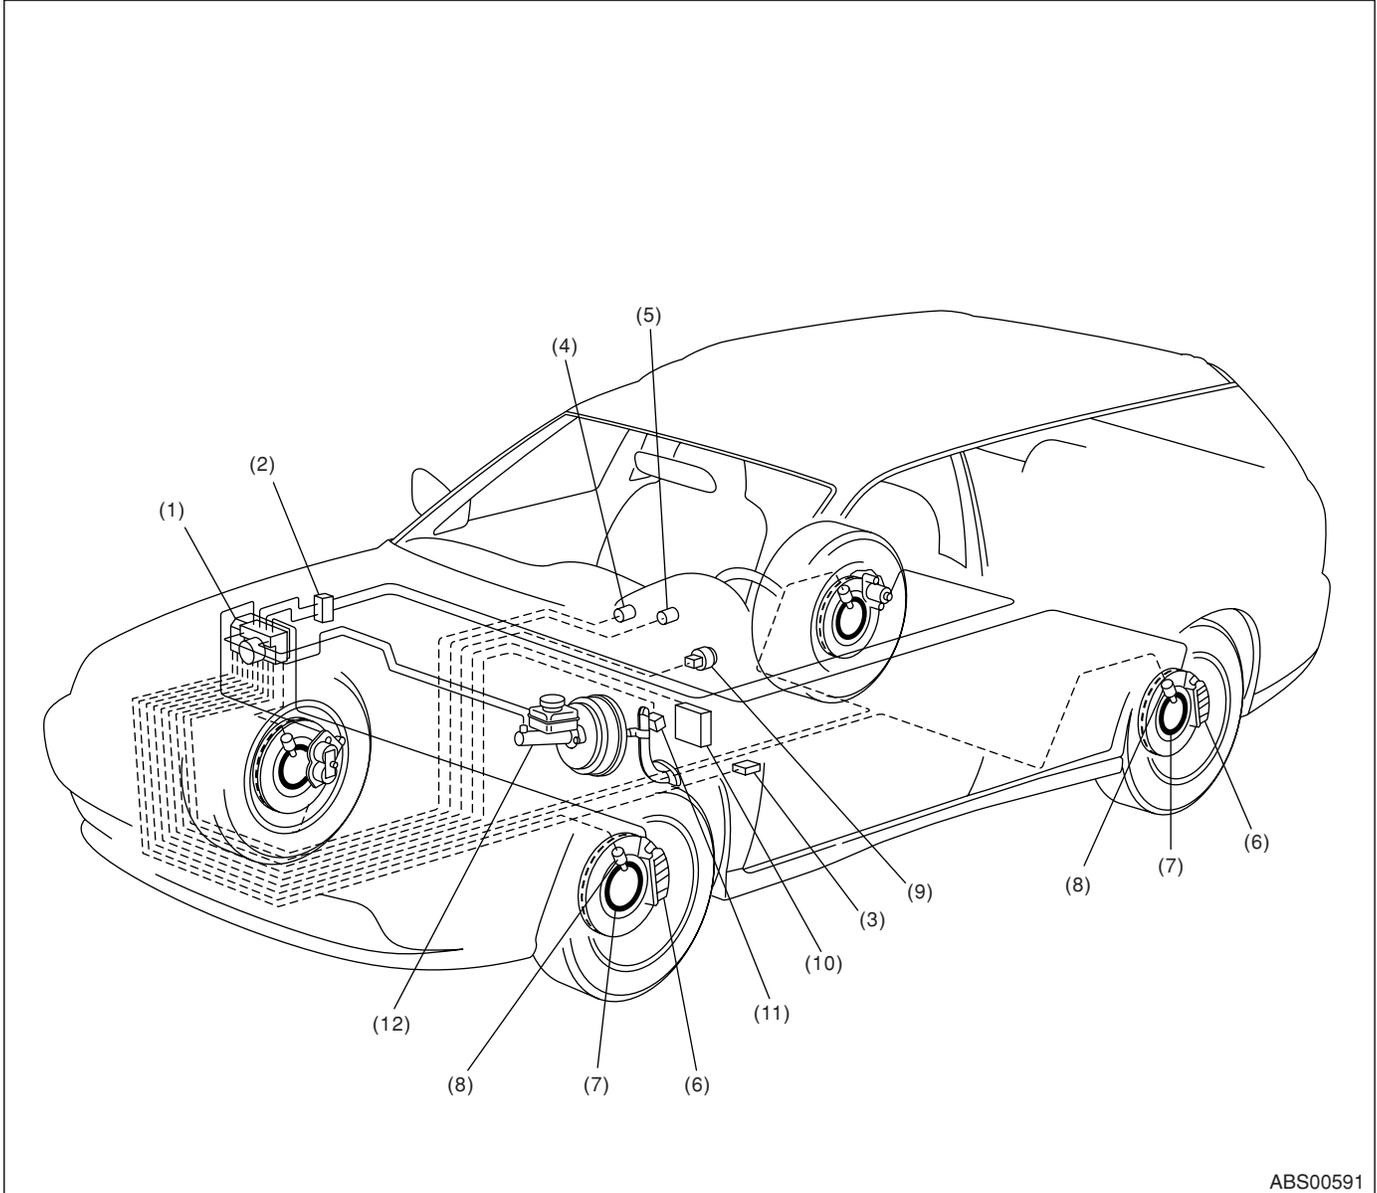

ABS00591

(1) ABS control module and hydraulic control unit (ABSCM&H/U)

(2) Two-way connector

(3) Data link connector
(For Subaru Select Monitor)

(4) ABS warning light

(5) Brake and EBD warning light

(6) Caliper body

(7) Magnetic encoder seal

(8) ABS wheel speed sensor

(9) G sensor

(10) Transmission control module (TCM) (AT model)

(11) Stop light switch

(12) Master cylinder

Electrical Component Location

ABS (DIAGNOSTICS)

