

Rear Quarter Trim


EXTERIOR/INTERIOR TRIM

25. Rear Quarter Trim

A: REMOVAL

1. SEDAN MODEL

- 1) Remove the rear seat. <Ref. to SE-19, SEDAN MODEL, REMOVAL, Rear Seat.>
- 2) Turn over the trim, and remove the quarter trim rear by pressing the claw (A) of metal clip using flat tip screwdriver or the like.

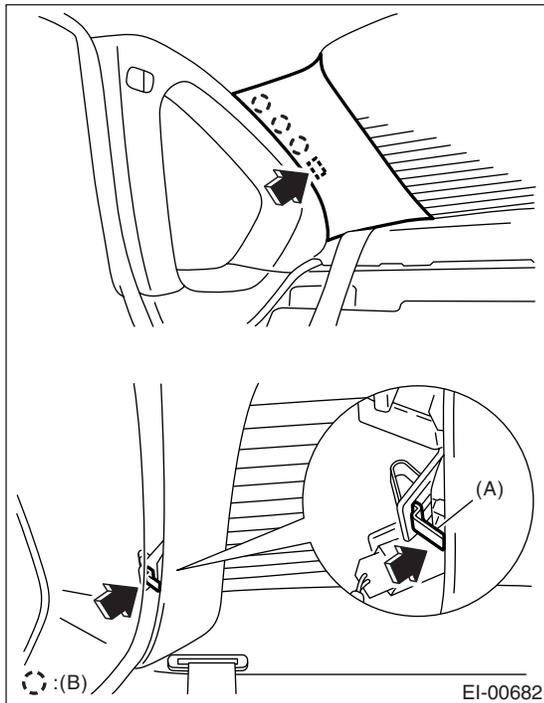


(B) Hook


CAUTION:

When metal clip is removed or damaged, replace the bolt of trim and metal clip with new ones.

- 3) Remove the cap on the upper side of trim, and remove the bolt inside.

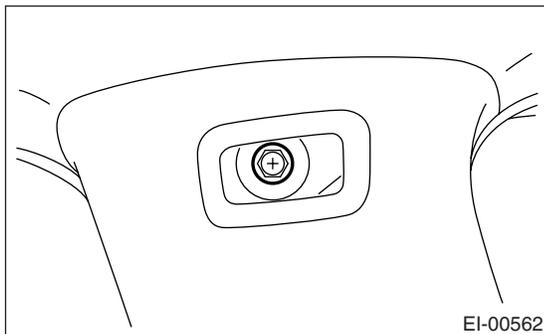


- 4) Remove the bolts (A), and remove the quarter trim (front).

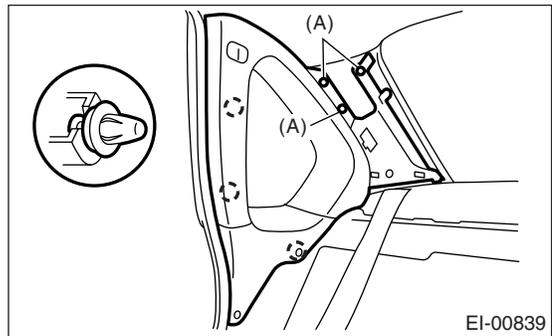


2. WAGON MODEL


- 1) Remove the rear seat cushion and backrest shoulder. <Ref. to SE-19, WAGON MODEL, REMOVAL, Rear Seat.>
- 2) Remove the cap on the upper side of pillar trim, and remove the bolt inside.

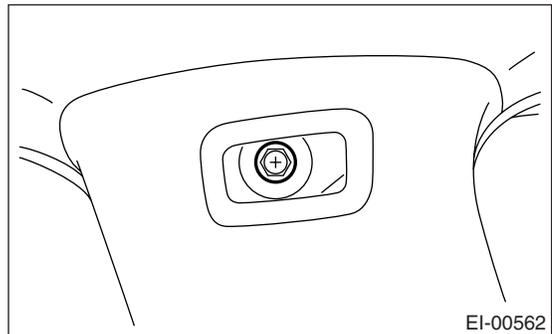

- 3) Remove the clip, and remove the quarter front pillar trim.

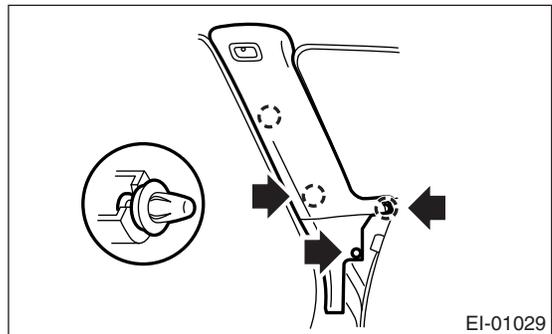


- 4) Remove the quarter rear pillar trim.

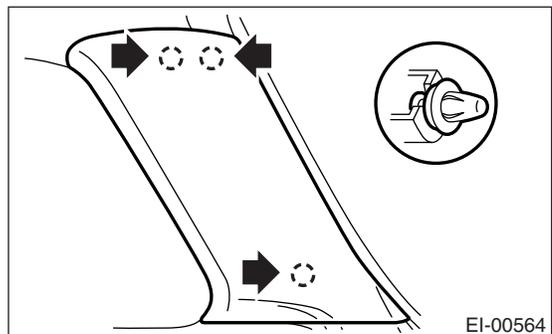


5) Remove the luggage floor box. <Ref. to EI-73, REMOVAL, Luggage Floor Box.>


6) Remove the luggage floor end cover.

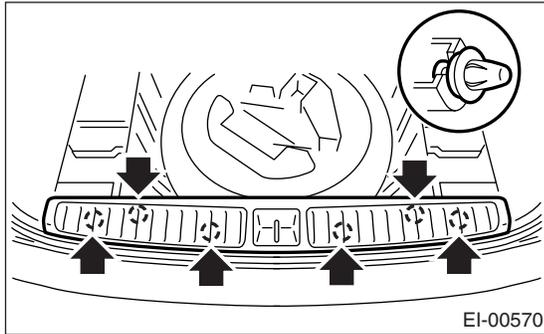

7) Remove the woofer cover. (Model with woofer)

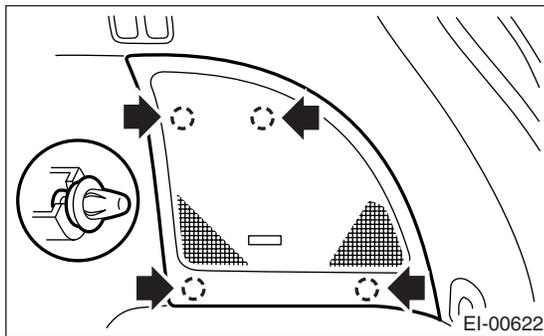

8) Remove the screws (A) and bolts (B), and remove the quarter lower trim.

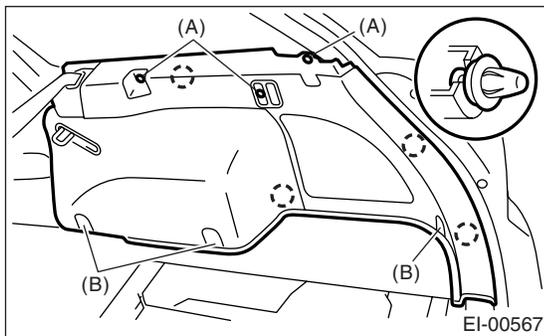

NOTE:

- Remove the screw cover on the tonneau cover installing part.
- Pull out the shopping bag hook, remove the screw on back.

B: INSTALLATION

1. SEDAN MODEL

Install in the reverse order of removal.

2. WAGON MODEL

Install in the reverse order of removal.