


## 9. Sub Frame Support Arm

### A: REMOVAL

- 1) Lift-up the vehicle, and support the rear sub frame with support stand.
- 2) Remove the sub frame support arm.

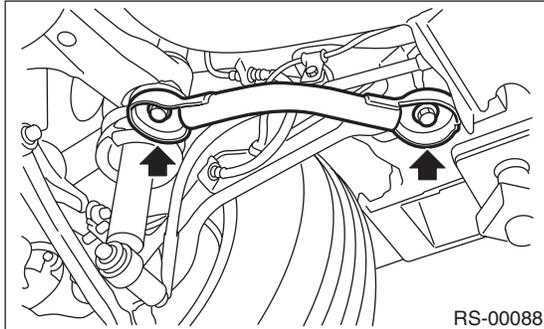

### B: INSTALLATION

Install in the reverse order of removal.

#### **Tightening torque:**

***Sub frame support arm to Rear arm bracket***  
***125 N·m (12.7 kgf·m, 92 ft·lb)***

***Sub frame support arm to Rear sub frame***  
***175 N·m (17.8 kgf·m, 129 ft·lb)***

### C: INSPECTION

Visually check the sub frame support arm for damage and deformation.