


Sub Frame Support Plate

REAR SUSPENSION

10.Sub Frame Support Plate

A: REMOVAL

- 1) Lift-up the vehicle, and support the rear sub frame with support stand.
- 2) Remove the sub frame support plate.

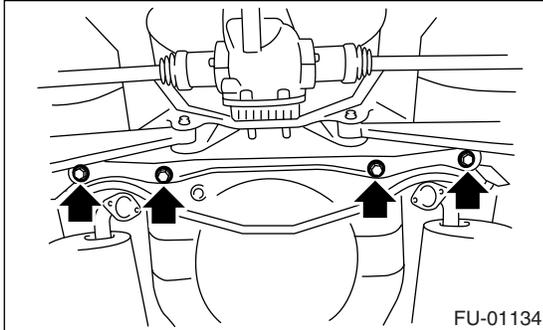

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

Support plate to Sub frame
175 N·m (17.8 kgf-m, 129 ft-lb)

Support plate to Body
65 N·m (6.6 kgf-m, 48 ft-lb)

C: INSPECTION

Visually check the support plate for damage.