


9. Clock

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the center air vent grille. <Ref. to AC-46, REMOVAL, Air Vent Grille.>
- 3) Loosen the screws, and then remove the clock (B) from center air vent grille (A).

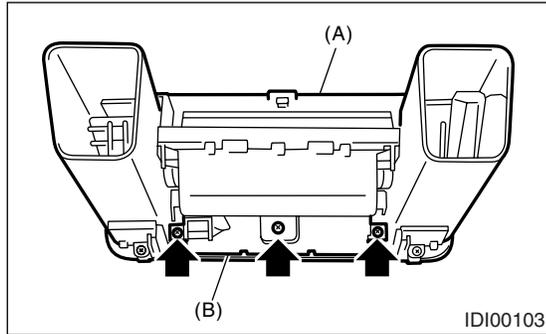

B: INSTALLATION

Install in the reverse order of removal.