


Heater Vent Duct

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

28.Heater Vent Duct

A: REMOVAL

- 1) Remove the instrument panel. <Ref. to EI-50, REMOVAL, Instrument Panel Lower Cover.>
- 2) Remove the screws and detach the center vent duct (A).
- 3) Remove the screws and detach the center vent ducts (B).
- 4) Remove the insulator, remove the screws and detach the defroster duct.

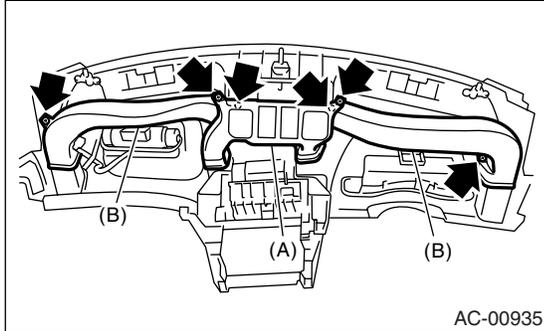

B: INSTALLATION

Install in the reverse order of removal.