


26. Air Vent Grille

A: REMOVAL


1. CENTER GRILLE

- 1) Disconnect the ground cable from battery.
- 2) Remove the three pawls and connector to remove center air vent grill.

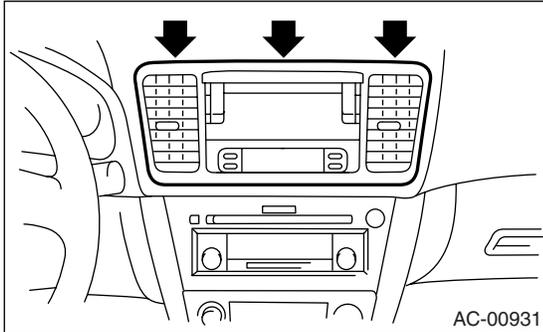

2. SIDE GRILLE

Remove the two pawls to remove side air vent grill.

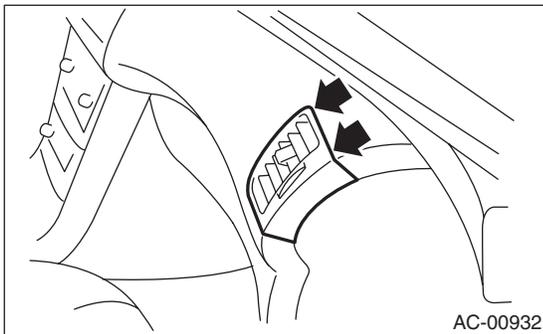

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

- 1) Check the direction and amount of air can be adjusted smoothly.
- 2) Check the adjustment can be kept in each position.