


21.Center Console

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the console box. <Ref. to EI-53, REMOVAL, Console Box.>
- 3) Remove the console front panel.

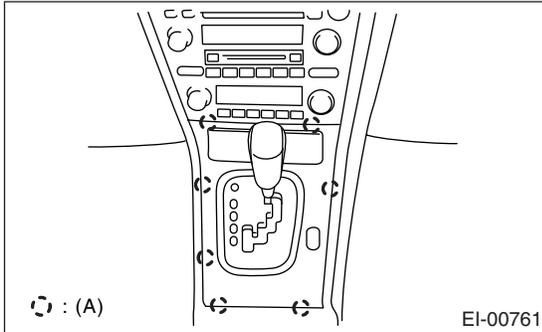


(A) Hook

NOTE:


For AT model, remove the ring indicator.
 For MT model, remove the shift knob.

- 4) Loosen the screw, remove the hook, and remove the console side garnish.

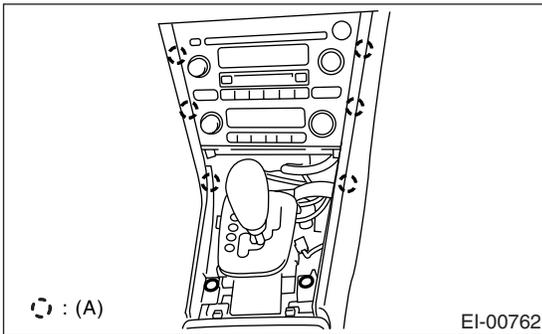


(A) Hook


- 5) Remove the instrument panel lower cover. <Ref. to EI-50, REMOVAL, Instrument Panel Lower Cover.>

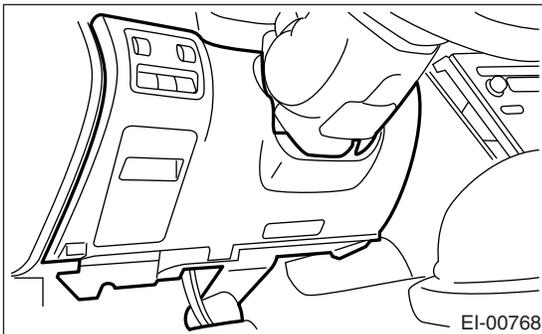

- 6) Remove the clip at the console side panel tip.

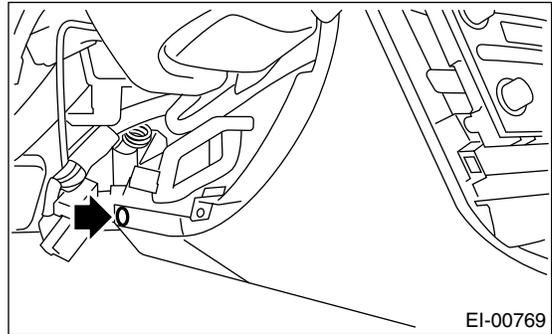

- 7) Remove the passenger side front inside scuff plate (A) and front pillar lower trim (B). <Ref. to EI-60, REMOVAL, Lower Inner Trim.>

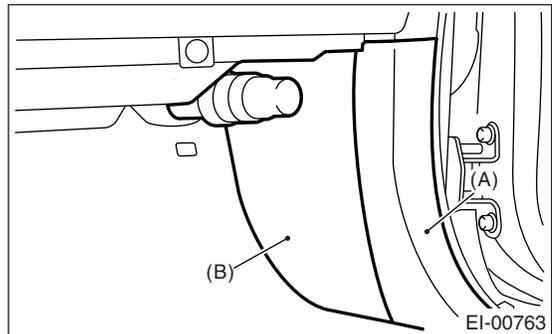

- 8) Remove the clip, and remove the glove box lower cover.

