

AIRBAG CONNECTORS

AIRBAG SYSTEM

3. Airbag Connectors


A: GENERAL

The airbag system uses connectors with a double lock mechanism and an incomplete-coupling-detection mechanism for enhanced reliability. If coupling is incomplete, the airbag warning light comes on in the combination meter.

1. DRIVER'S SEAT AIRBAG MODULE-TO-SEAT BELT PRETENSIONER CONNECTOR


Disconnection:

- 1) Lift the lock button using a thin tipped tool like a miniature screwdriver.

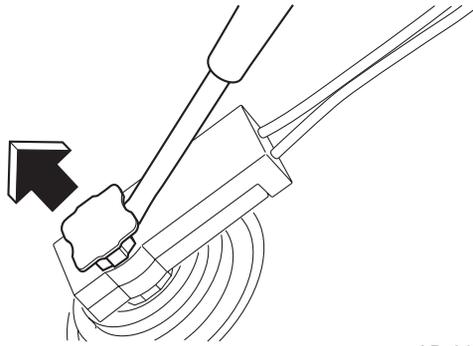

AB-00529

- 2) Pull the connector out from the airbag module.

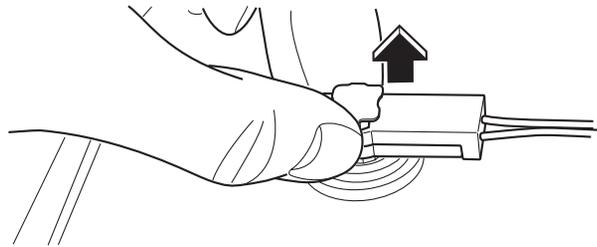

AB-00528


Connection:

Carefully insert the connector into the airbag module. Push the connector until a “click” is heard from the lock button.

AIRBAG CONNECTORS

AIRBAG SYSTEM


2. AIRBAG MAIN HARNESS-TO-ROLL CONNECTOR, AND PASSENGER'S SEAR AIRBAG MODULE CONNECTOR

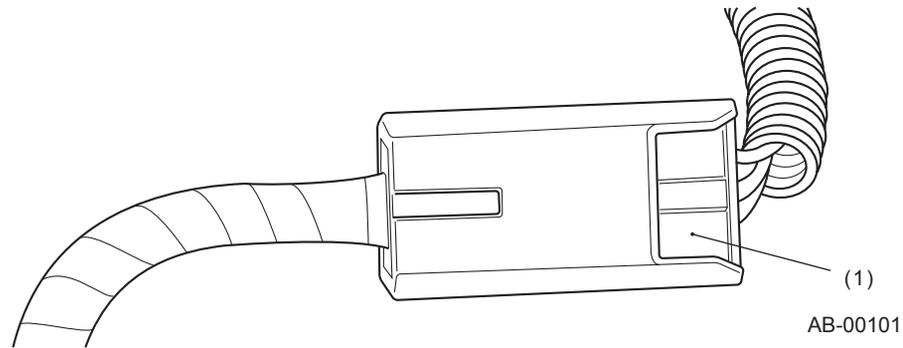


(1) Slide lock

Disconnection:

- 1) Press the slide lock inwards.

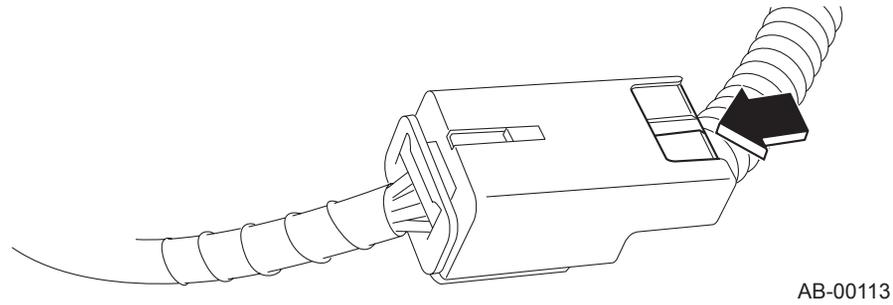

- 2) While the slide lock pressed in, disconnect the connector (A).

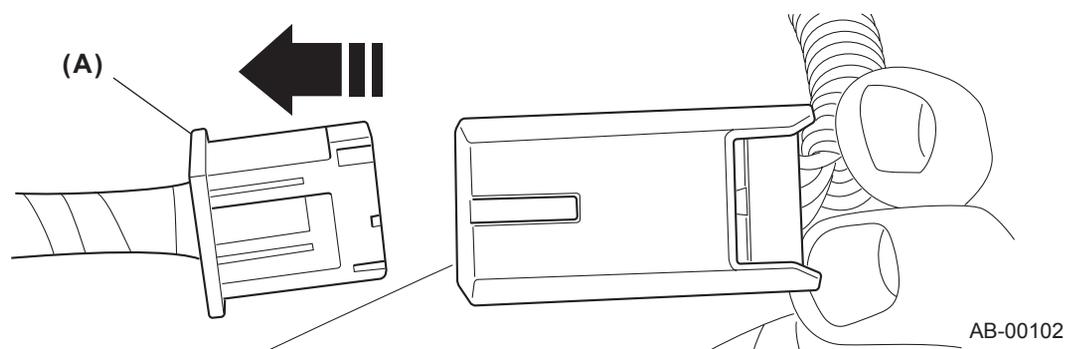


Connection:

Insert the female side connector half into the other until a "click" is heard.

AIRBAG CONNECTORS

AIRBAG SYSTEM


3. SIDE AIRBAG MODULE AND CURTAIN AIRBAG MODULE CONNECTORS

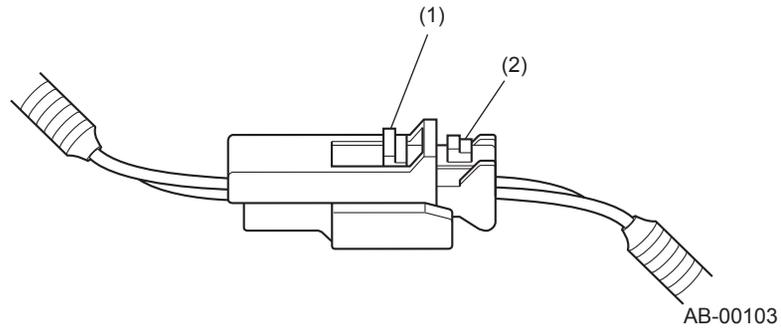


- (1) Slide lock
- (2) Lock arm

Disconnection:

- 1) Push in and hold the lock arm (A), then pull the slide lock (B).

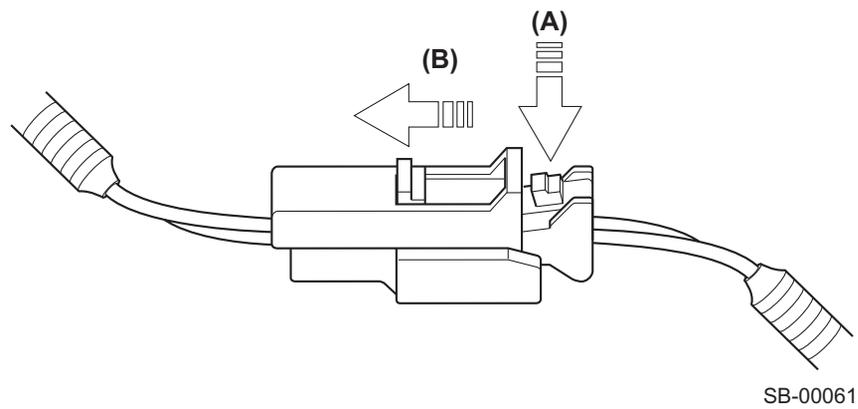


- 2) While the slide lock pulled and held (B), release the lock arm (C).

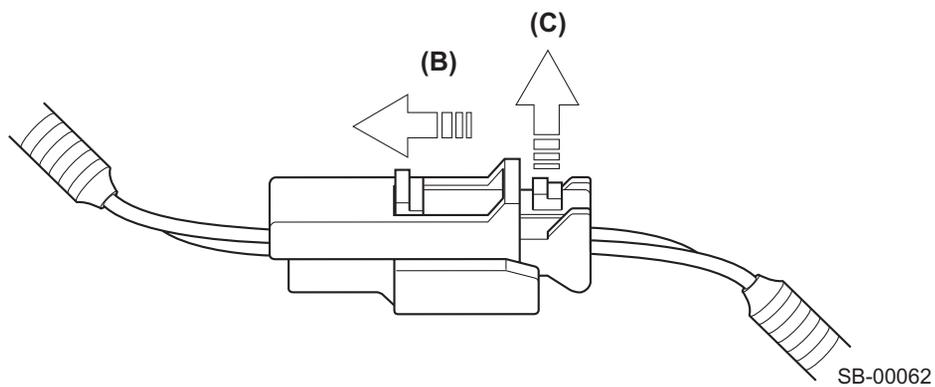

AIRBAG CONNECTORS

AIRBAG SYSTEM

3) While the slide lock pulled and held (B), disconnect the connector (D).

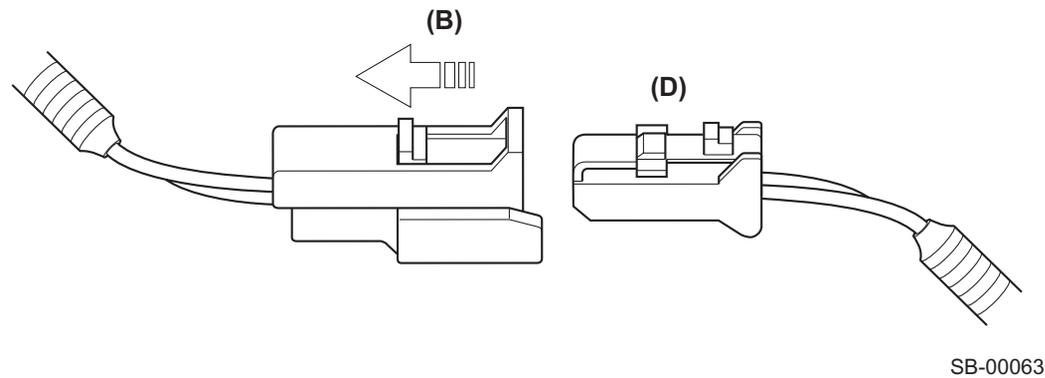


Connection:

Insert the female side connector half into the other until a “click” is heard.

4. AIRBAG HARNESS-TO-BODY HARNESS, OCCUPANT DETECTION CONTROL MODULE-TO-BODY HARNESS, AND SEAT BELT BUCKLE SWITCH CONNECTORS


Disconnection:

Hold slide lock (A) moved in the direction of the arrow, then pull the female connector in the direction of the arrow.

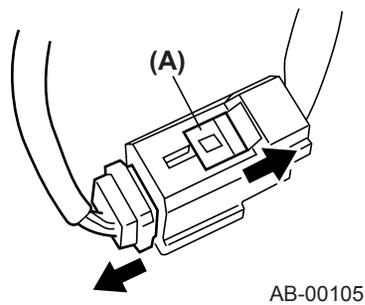

Connection:

Push the connector (A) into the male connector carefully until a “click” is heard.

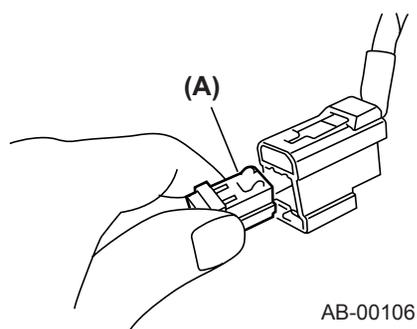

AB-21


AIRBAG CONNECTORS

AIRBAG SYSTEM

5. FRONT SUB SENSOR, SIDE AIRBAG SENSOR, CURTAIN AIRBAG SENSOR, AND SEAT POSITION SENSOR (LH) CONNECTORS

Disconnection:

Holding the outer part (A), pull the connector in the direction of the arrow.

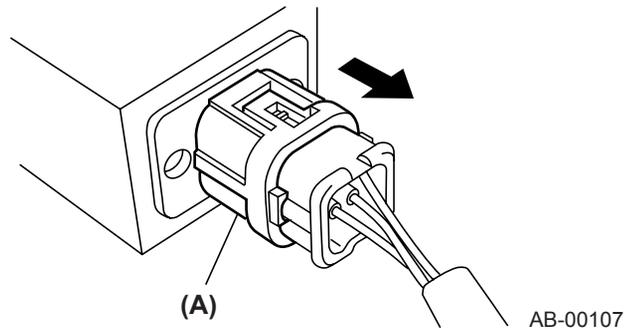

Connection:

Holding the inner part, push the connector into the socket carefully until a “click” is heard. Do not hold the outer part (A) as it moves back during connection of the connector.

