

Trunk Room Trim


EXTERIOR/INTERIOR TRIM

31. Trunk Room Trim


A: REMOVAL

1. TRUNK LID TRIM

1) Remove the trim clips and stopper rubbers, and remove the trunk lid trim.

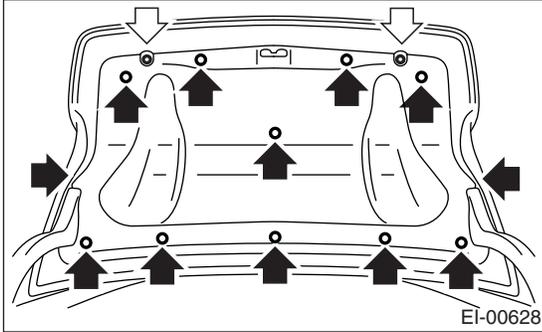


2) Remove the four pawls, and then remove trunk handle cover (1).

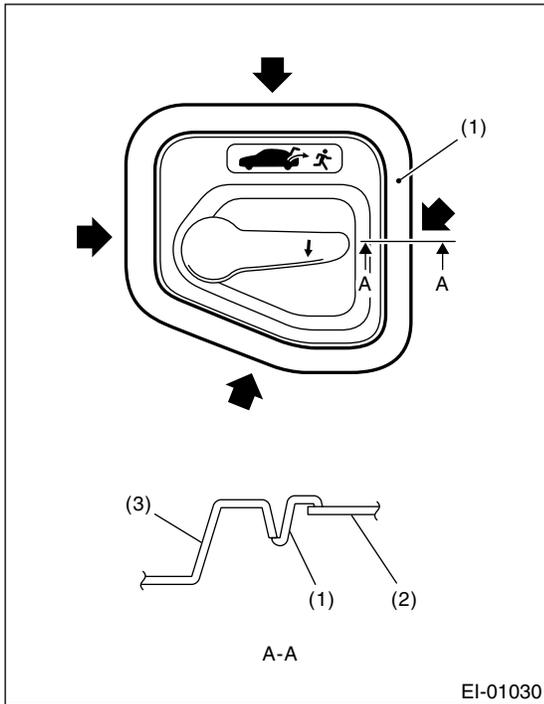


- (1) Trunk handle cover
- (2) Trunk lid trim
- (3) Trunk release handle

3) Remove the clip (A) of trunk side trim, and then remove the trunk lid arm cover.

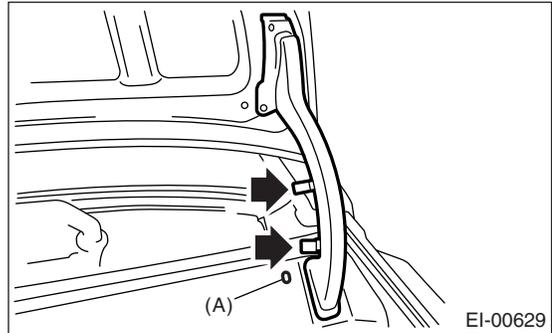


2. TRUNK ROOM TRIM

1) Remove the trunk room mat.

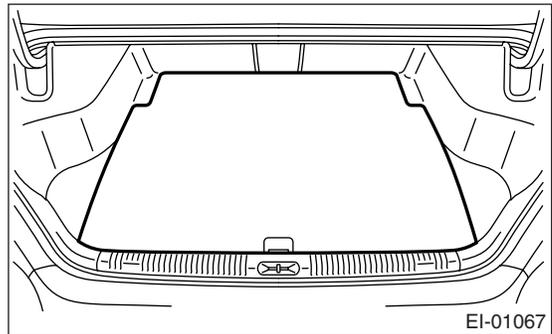


2) Remove the trim clips (A), and remove the trunk room end cover.

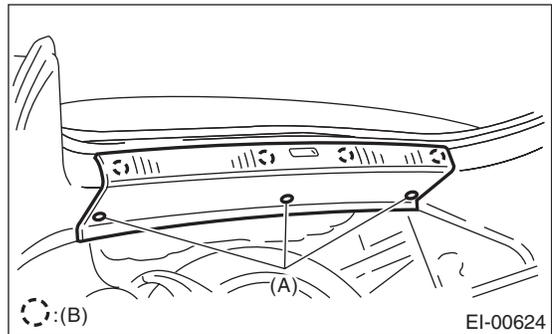


(B) Clip


3) Remove the rear seat backrest, and then remove the trim clips at the front side of trunk side trim. <Ref. to SE-19, WAGON MODEL, REMOVAL, Rear Seat.>

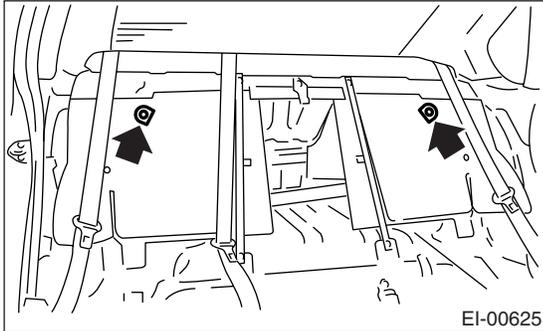

4) Insert the flat tip driver from the lower side of trunk hook, and then remove the trunk hook with rotating it 90°.

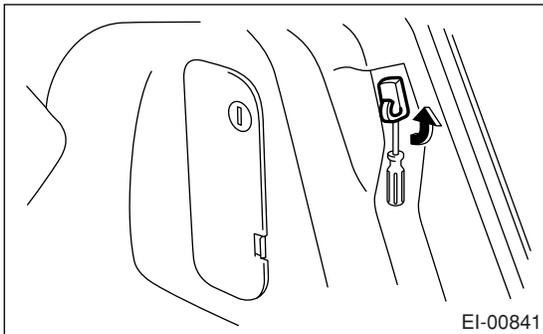

5) Remove the trim clips, and remove the trunk side trim.

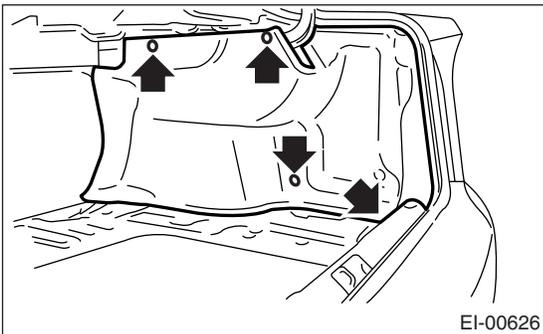

B: INSTALLATION

1. TRUNK LID TRIM

Install in the reverse order of removal.

2. TRUNK ROOM TRIM

Install in the reverse order of removal.