


# Fuel Tank Pressure Sensor

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)


## 10. Fuel Tank Pressure Sensor

### A: REMOVAL

- 1) Set the vehicle on the lift.
- 2) Open fuel filler flap lid, and remove fuel filler cap.
- 3) Disconnect the battery ground cable.

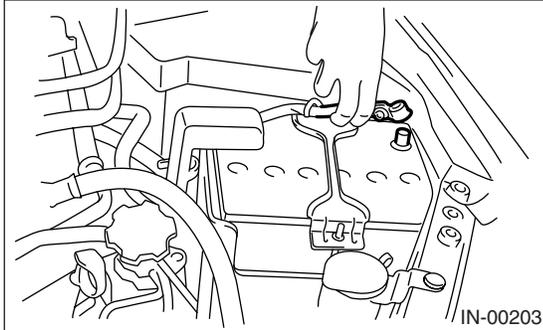


- 4) Lift-up the vehicle.
- 5) Disconnect the connector from fuel tank pressure sensor and fuel tank sensor control valve.
- 6) Disconnect the pressure hose from fuel tank pressure sensor.
- 7) Remove fuel tank pressure sensor and fuel tank sensor control valve with bracket.

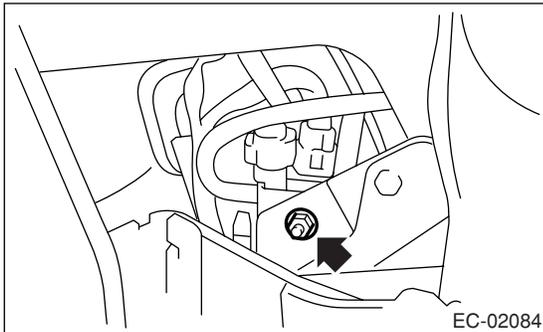

### NOTE:

Replace the fuel tank pressure sensor and fuel tank sensor control valve as a unit.

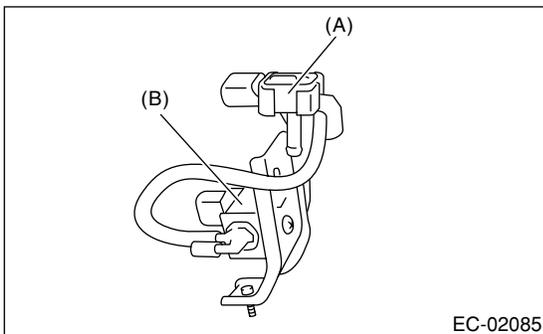


- (A) Fuel tank pressure sensor
- (B) Fuel tank sensor control valve

### B: INSTALLATION

Install in the reverse order of removal.

#### Tightening torque:

**7.4 N·m (0.75 kgf-m, 5.4 ft-lb)**

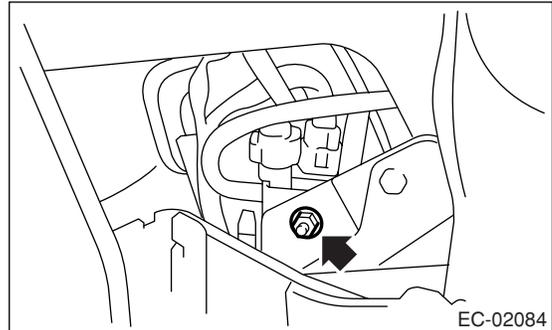

### C: INSPECTION

Make sure that hoses are not cracked or loose.