


## 6. Muffler

### A: REMOVAL

1) Separate the muffler (RH) from rear exhaust pipe.

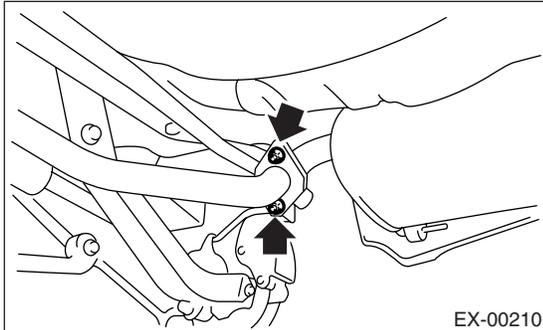


2) Remove the cushion rubbers, and detach the muffler.

#### CAUTION:

**Be careful not to drop the muffler during removal.**

#### NOTE:

To facilitate removal, apply a coat of spray type lubricant to the mating area of cushion rubbers in advance.

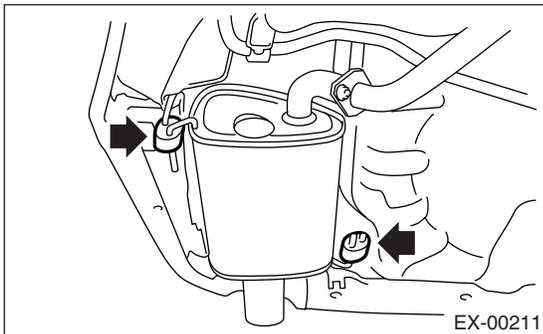

3) Perform the same procedure for muffler (LH).

### B: INSTALLATION


Install in the reverse order of removal.

#### NOTE:

Always use a new gasket and self-locking nuts.

#### Tightening torque:

**48 N·m (4.9 kgf·m, 35.4 ft·lb)**

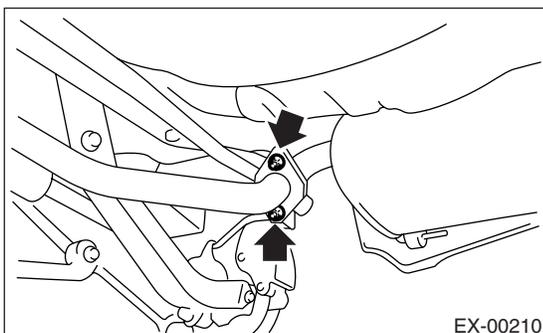

### C: INSPECTION

- 1) Check the connections and welds for exhaust leaks.
- 2) Check the mufflers for holes or rust.
- 3) Check the cushion rubber for wear or crack.