

### 25. Fuel


#### A: PROCEDURE

##### 1. RELEASING OF FUEL PRESSURE

###### WARNING:

- Place “NO FIRE” signs near the working area.
- Be careful not to spill fuel on the floor.

1) Remove the fuse of fuel pump from main fuse box.

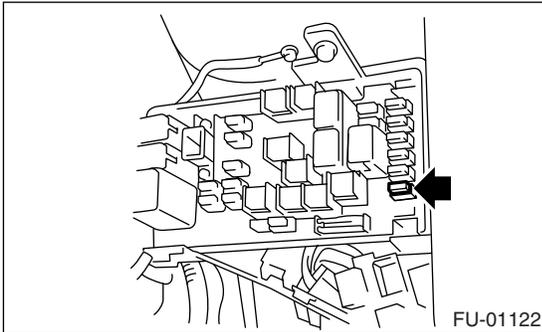


- 2) Start the engine and run it until it stalls.  
 3) After the engine stalls, crank it for five more seconds.  
 4) Turn the ignition switch to OFF.

##### 2. DRAINING FUEL

###### WARNING:


- Place “NO FIRE” signs near the working area.
- Be careful not to spill fuel on the floor.

- 1) Set the vehicle on a lift.  
 2) Disconnect the ground cable from battery.

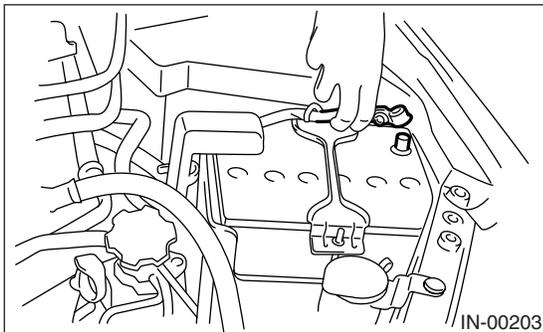

- 3) Open the fuel filler flap lid and remove the fuel filler cap.  
 4) Lift-up the vehicle.  
 5) Remove the fuel tank protector.

6) Set a container under the vehicle and remove drain plug from fuel tank to drain fuel from the fuel tank.

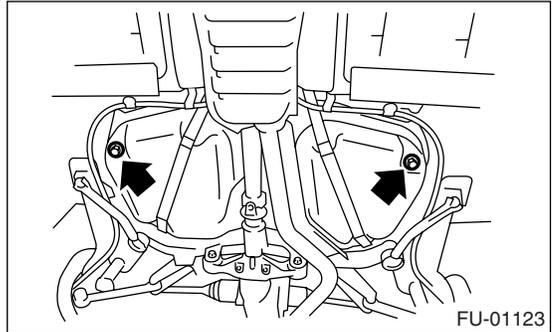

7) Tighten the fuel drain plug.

###### NOTE:

Use a new gasket.

###### **Tightening torque:**

**26 N·m (2.65 kgf-m, 19.2 ft-lb)**

8) Install the fuel tank protector.

###### NOTE:

Use a new gasket.

###### **Tightening torque:**

**Nut**

**9 N·m (0.9 kgf-m, 6.6 ft-lb)**

**Bolt**

**17.5 N·m (1.78 kgf-m, 12.9 ft-lb)**