


12.Rear Door Lock Actuator

A: REMOVAL

- 1) Remove the rear door latch & door lock actuator assembly. <Ref. to SL-38, REMOVAL, Rear Door Latch & Door Lock Actuator Assembly.>
- 2) Remove the pawl of rear door latch security cover, and then remove the cover.
- 3) Remove the screw from the rear door latch and door lock actuator, and then remove the door lock actuator.

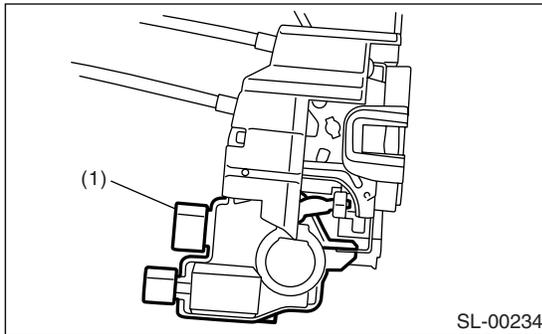

(1) Rear door lock actuator

B: INSTALLATION

Install in the reverse order of removal.


NOTE:

Make sure the lock works correctly after installation.

C: INSPECTION

- 1) Disconnect the door lock actuator harness connector.
- 2) Connect the battery to door lock actuator terminals.

If defective, replace the door lock actuator.

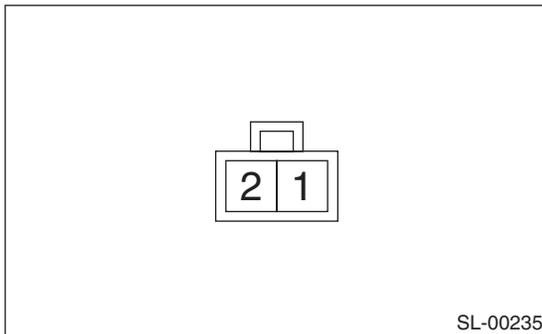

Terminal No.	Actuator operation
No. 2 (+) and No. 1 (-)	Unlocked → Locked
No. 1 (+) and No. 2 (-)	Locked → Unlocked