


Blower Motor

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

8. Blower Motor

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the glove box lower cover. <Ref. to EI-51, REMOVAL, Glove Box.>
- 3) Disconnect the connector of blower motor.
- 4) Loosen the screw to remove blower motor.

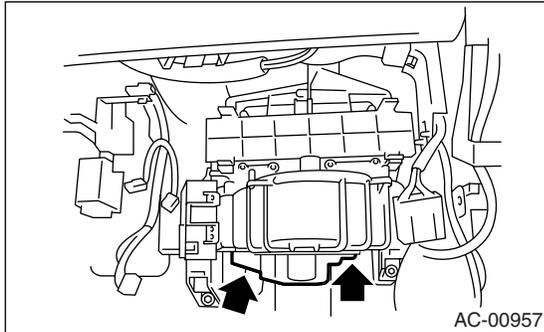

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

Connect the battery positive (+) terminal to terminal No. 2 of blower motor, and negative (-) terminal to terminal No. 1. Check the blower motor for smooth rotation.

