


26.Sun Visor


A: REMOVAL

1) Remove the cover, loosen the mounting screws, and remove the sun visor.

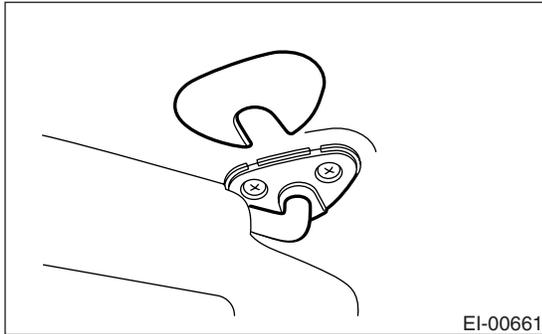

2) Disconnect the connector. (Model with vanity mirror light)

3) Press the (A) on both side using flat tip driver, pull the sun visor hook and remove it.

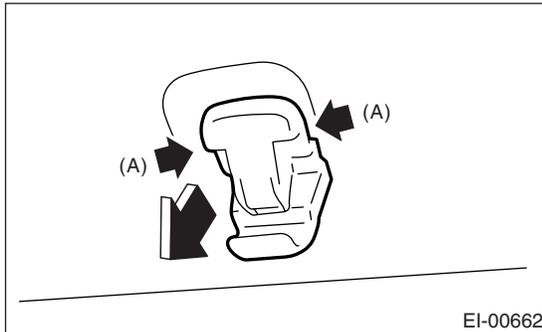

B: INSTALLATION

Install in the reverse order of removal.