


18. Remote Openers

A: REMOVAL

1. FRONT HOOD OPENER


- 1) Remove the cable from hood lock.
- 2) Remove the bolt, and then detach the opener lever.

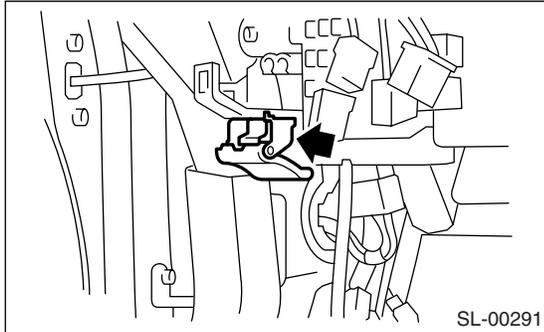

2. TRUNK LID OPENER

- 1) Remove the rear seat. <Ref. to SE-20, REMOVAL, Rear Seat.>
- 2) Remove the center pillar lower trim, side sill cover, rear pillar lower trim and floor mat on the driver's side. Remove the clip holding cable.
- 3) Remove the opener lever (1) and rear cover (2).
- 4) Remove the pin (3) and remove front cover (4).

- 5) Remove the bolt and nut, and remove the pull handle assembly (5).

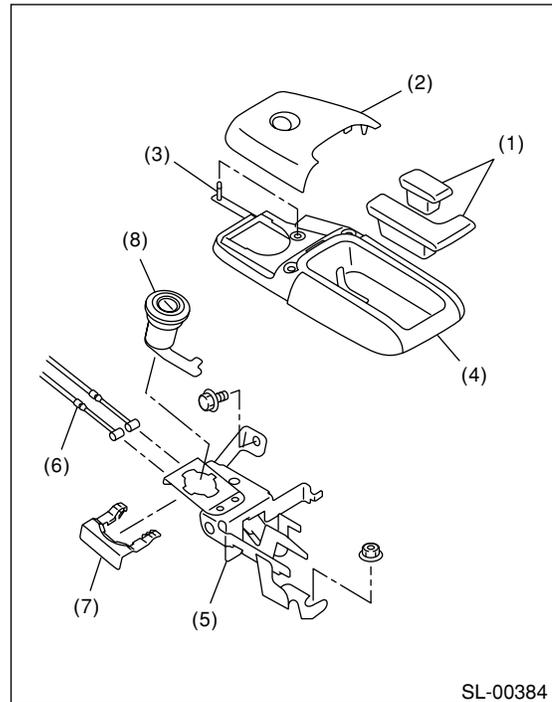

- (1) Opener lever
- (2) Rear cover
- (3) Pin
- (4) Front Cover
- (5) Pull handle ASSY
- (6) Cable
- (7) Clamp
- (8) Key cylinder

- 6) Remove the cable from pull handle assembly.
- 7) Remove the clamp (7) to remove key cylinder (8).

CAUTION:


Remove the key cylinder with its UNLOCK position.

- 8) Remove the trunk lid lock assembly from trunk lid.

Remote Openers

SECURITY AND LOCKS

9) Remove the cable from trunk lid lock assembly.

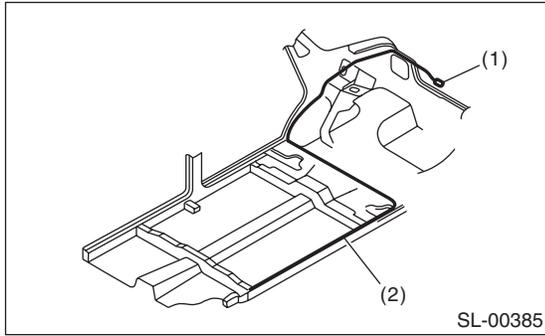

- (1) Trunk lid lock ASSY
- (2) Cable

3. FUEL FILLER FLAP LID OPENER

• Sedan model


<Ref. to SL-45, TRUNK LID OPENER, REMOVAL, Remote Openers.>

• Wagon model

1) Remove the rear seat. <Ref. to SE-20, REMOVAL, Rear Seat.>

2) Remove the center pillar lower trim, side sill cover, rear pillar lower trim and floor mat on the driver's side. Remove the clip holding cable.

3) Remove the bolt and nut, and then detach the pull handle assembly.

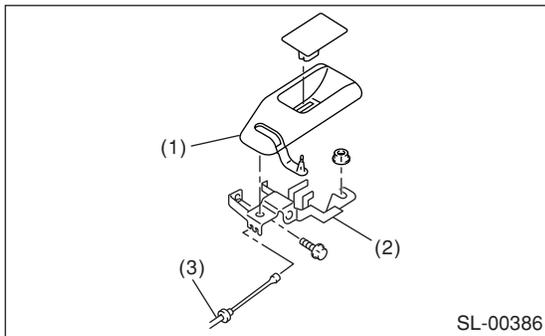


- (1) Cover
- (2) Pull handle ASSY
- (3) Cable

4) Remove the cable from pull handle assembly.

5) Remove the rear quarter trim RH. <Ref. to EI-62, REMOVAL, Rear Quarter Trim.>

6) Rotate the fuel lock inside of the quarter panel to 90° and remove. (Either right or left turn)

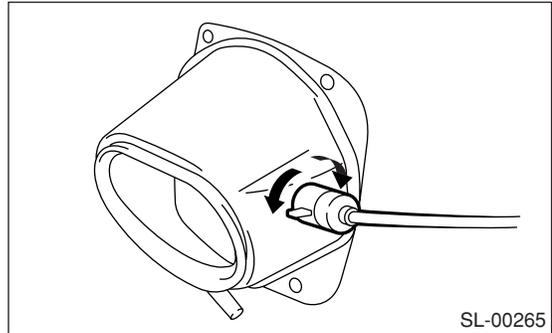

B: INSTALLATION

1. FRONT HOOD OPENER

Install in the reverse order of removal.

2. TRUNK LID OPENER

Install in the reverse order of removal.

CAUTION:

Install the key cylinder with its **UNLOCK** position.

3. FUEL FILLER FLAP LID OPENER

Install in the reverse order of removal.

C: INSPECTION

Make sure the front hood, trunk lid and fuel filler flap lid open and close smoothly.