

29. Fuel Level Sensor

A: REMOVAL


WARNING:

- Place “NO FIRE” signs near the working area.
- Be careful not to spill fuel on the floor.

NOTE:

Fuel level sensor is built in fuel pump assembly.

- 1) Remove the fuel pump assembly. <Ref. to FU(H4DOTC)-54, REMOVAL, Fuel Pump.>
- 2) Disconnect the connector from fuel pump bracket.
- 3) Remove the fuel temperature sensor.
- 4) Remove the fuel level sensor.

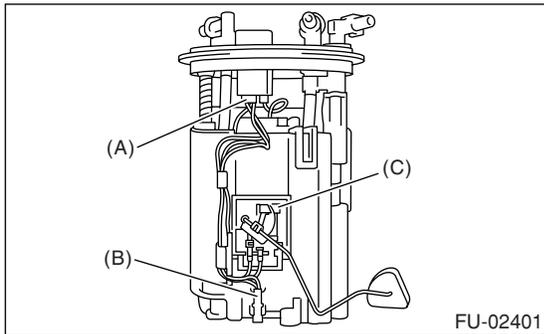

- (A) Connector
- (B) Fuel temperature sensor
- (C) Fuel level sensor

B: INSTALLATION

Install in the reverse order of removal.