


10. Rear Outer Handle

A: REMOVAL

- 1) Raise the rear door glass to the top position.
- 2) Remove the rear door trim. <Ref. to EI-48, REMOVAL, Door Trim.>
- 3) Remove the sealing cover. <Ref. to EB-24, REMOVAL, Rear Sealing Cover.>
- 4) Remove the rear door latch assembly. <Ref. to SL-38, REMOVAL, Rear Door Latch & Door Lock Actuator Assembly.>
- 5) Remove the cable from cable clamp (1) of outer handle.
- 6) Remove the two bolts.

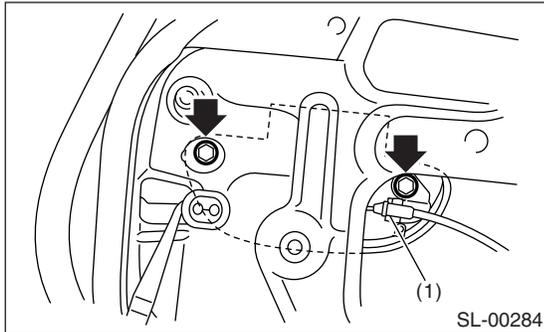

- 7) Detach the rear outer handle.

CAUTION:

Do not apply excessive force to remove the handle from door panel. Otherwise door panel may be deformed.

B: INSTALLATION

Install in the reverse order of removal.

NOTE:

Make sure the outer handle works correctly after installation.

C: INSPECTION

- 1) Check the cable for deformation. When it is deformed, straighten it because failure operations may occur. When it is unrepairable, replace the rear door latch & door lock actuator assembly.
- 2) Check the handle and cable for smooth operation.