

55.Rear Wiring Harness

A: LOCATION

1. SEDAN MODEL

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
R1	20	★	C-3	B97	Bulkhead wiring harness
R2	16	★	B-2	B98	Bulkhead wiring harness
R4	1	Black	C-3		Parking brake switch
R8	4	★	C-4		Front seat belt switch (Driver side)
R9	3	★	C-4		Front door switch LH
R10	8	★	B-3	D22	Rear door cord (Passenger side)
R12	3	★	B-3		Front door switch RH
R13	10	★	C-4	D28	Rear door cord (Driver side)
R15	8	★	B-4	R57	Fuel cord 1
R16	3	★	B-4		Rear door switch RH
R25	2	Black	B-4		Rear defroster condenser
R41	4	★	C-4		Seat heater LH
R43	20	★	C-3		Seat heater switch
R44	4	★	B-3		Seat heater RH
R46	6	★	B-4	R67	Fuel cord 2
R50	12	★	B-2	B90	Bulkhead wiring harness
R51	2	★	B-3		Vanity mirror illumination RH
R52	3	★	B-3		Room light
R54	2	Black	B-3		Vanity mirror illumination LH
R55	10	Gray	B-3		Sunroof control module
R56	2	★	B-3		Spot map light
R57	3	★	B-3		Rearview mirror
R72	2	★	B-4		Rear ABS wheel speed sensor RH
R73	2	★	B-4		Rear ABS wheel speed sensor LH
R98	18	★	B-2	i53	Instrument panel wiring harness (Passenger side)
R109	2	★	B-3		Power seat (Passenger side)
R128	6	★	B-3		Sunroof control switch
R142	2	★	C-4		Fuel pump condenser
R166	5	★	B-3		Seatbelt warning light
R167	16	★	C-3	i102	Instrument panel wiring harness (Driver side)
R168	20	★	C-3		Fuse & relay box (F/B)
R169	8	★	C-3		Impact sensor
R187	5	★	B-3		Tilt switch
R188	2	★	C-4		Power seat (Driver side)
R210	4	★	C-3	AB50	Airbag sub harness
R211	12	★	C-4		TPM control module
R212	2	★	B-3		SSM

★: Non-colored

Rear Wiring Harness


WIRING SYSTEM

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
AB17	20	★	C-3		Airbag control module LH (Model with side airbag, curtain airbag)
	12	★			Airbag control module LH
AB18	20	★	C-2		Airbag control module RH (Model with side airbag, curtain airbag)
	12	★			Airbag control module RH
AB19	2	★	C-4	AB20	Inflator (Side) LH
AB21	2	★	C-4		Pretensioner LH
AB23	4	★	C-4		Side airbag sensor LH
AB24	2	★	B-3	AB25	Inflator (Side) RH
AB26	2	★	B-3		Pretensioner RH
AB28	4	★	B-3		Side airbag sensor RH
AB34	4	★	B-3		Curtain airbag sensor RH
AB51	2	★	C-4		Buckle switch
AB52	2	★	C-4		Seat position sensor
AB53	4	★	B-3		Occupant detection control module

★: Non-colored

Rear Wiring Harness

WIRING SYSTEM

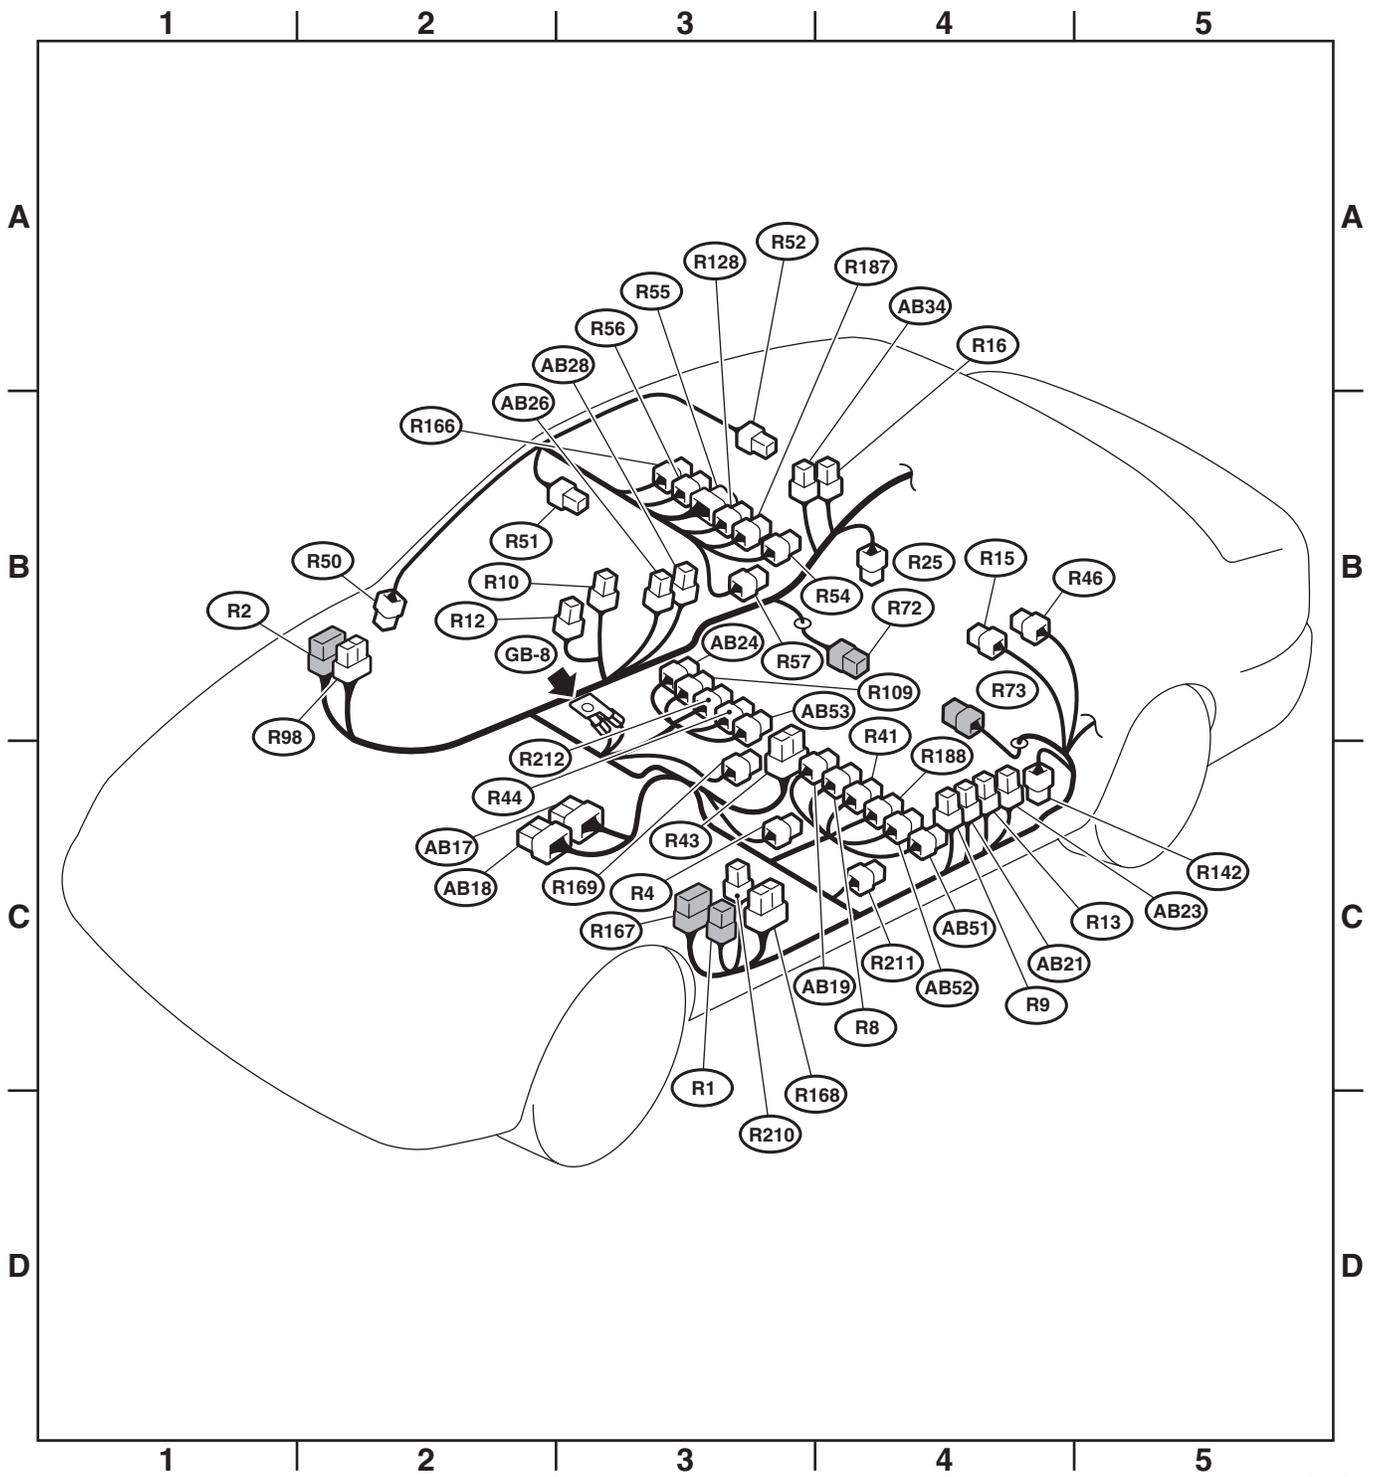

WI-05438

Rear Wiring Harness

WIRING SYSTEM

2. WAGON MODEL

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
R1	20	★	C-3	B97	Bulkhead wiring harness
R2	16	★	B-1	B98	Bulkhead wiring harness
R4	1	Black	C-2		Parking brake switch
R8	4	★	C-3		Front seat belt switch (Driver side)
R9	3	★	C-4		Front door switch LH
R10	8	★	B-2	D22	Rear door cord (Passenger side)
R12	3	★	B-2		Front door switch RH
R13	8	★	C-4	D28	Rear door cord (Driver side)
R15	8	★	B-4	R57	Fuel cord 1
R16	3	★	A-3		Rear door switch RH
R25	2	Black	B-3		Rear defroster condenser
R41	4	★	C-3		Seat heater LH
R43	20	★	B-3		Seat heater switch
R44	4	★	B-3		Seat heater RH
R46	6	★	B-4	R67	Fuel cord 2
R50	12	★	B-1	B90	Bulkhead wiring harness
R51	2	★	A-2		Vanity mirror illumination RH
R52	3	★	A-3		Room light
R54	2	★	B-3		Vanity mirror illumination LH
R55	2	Gray	A-2		Sunroof control module
R56	2	★	A-2		Spot map light
R57	3	★	B-3		Rearview mirror
R72	2	★	B-4		Rear ABS wheel speed sensor RH
R73	2	★	B-4		Rear ABS wheel speed sensor LH
R98	18	★	B-1	i53	Instrument panel wiring harness (Passenger side)
R109	2	Black	B-3		Power seat (Passenger side)
R142	2	Black	C-4		Fuel pump condenser
R166	5	★	B-3		Seatbelt warning light
R167	16	★	C-3	i102	Instrument panel wiring harness (Driver side)
R168	20	★	C-3		Fuse & relay box (F/B)
R169	8	★	B-2		Impact sensor
R188	2	Black	C-4		Power seat (Driver side)
R210	4	★	C-2		Airbag sub harness
R211	12	White	C-4		TPM control module

★: Non-colored


Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
AB17	20	★	C-2		Airbag control module LH (Model with side airbag, curtain airbag)
	12	★			Airbag control module LH
AB18	20	★	C-2		Airbag control module RH (Model with side airbag, curtain airbag)
	12	★			Airbag control module RH
AB19	2	★	C-3	AB20	Inflator (Side) LH
AB21	2	★	C-4		Pretensioner LH
AB23	4	★	C-4		Side airbag sensor LH
AB24	2	★	B-3	AB25	Inflator (Side) RH
AB26	2	★	B-2		Pretensioner RH

Rear Wiring Harness

WIRING SYSTEM

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
AB28	4	★	B-3		Side airbag sensor RH
AB34	4	★	B-3		Curtain airbag sensor RH
AB51	2	★	C-3		Buckle switch
AB52	2	★	C-3		Seat position sensor
AB53	4	★	B-4		Occupant detection control module

★: Non-colored

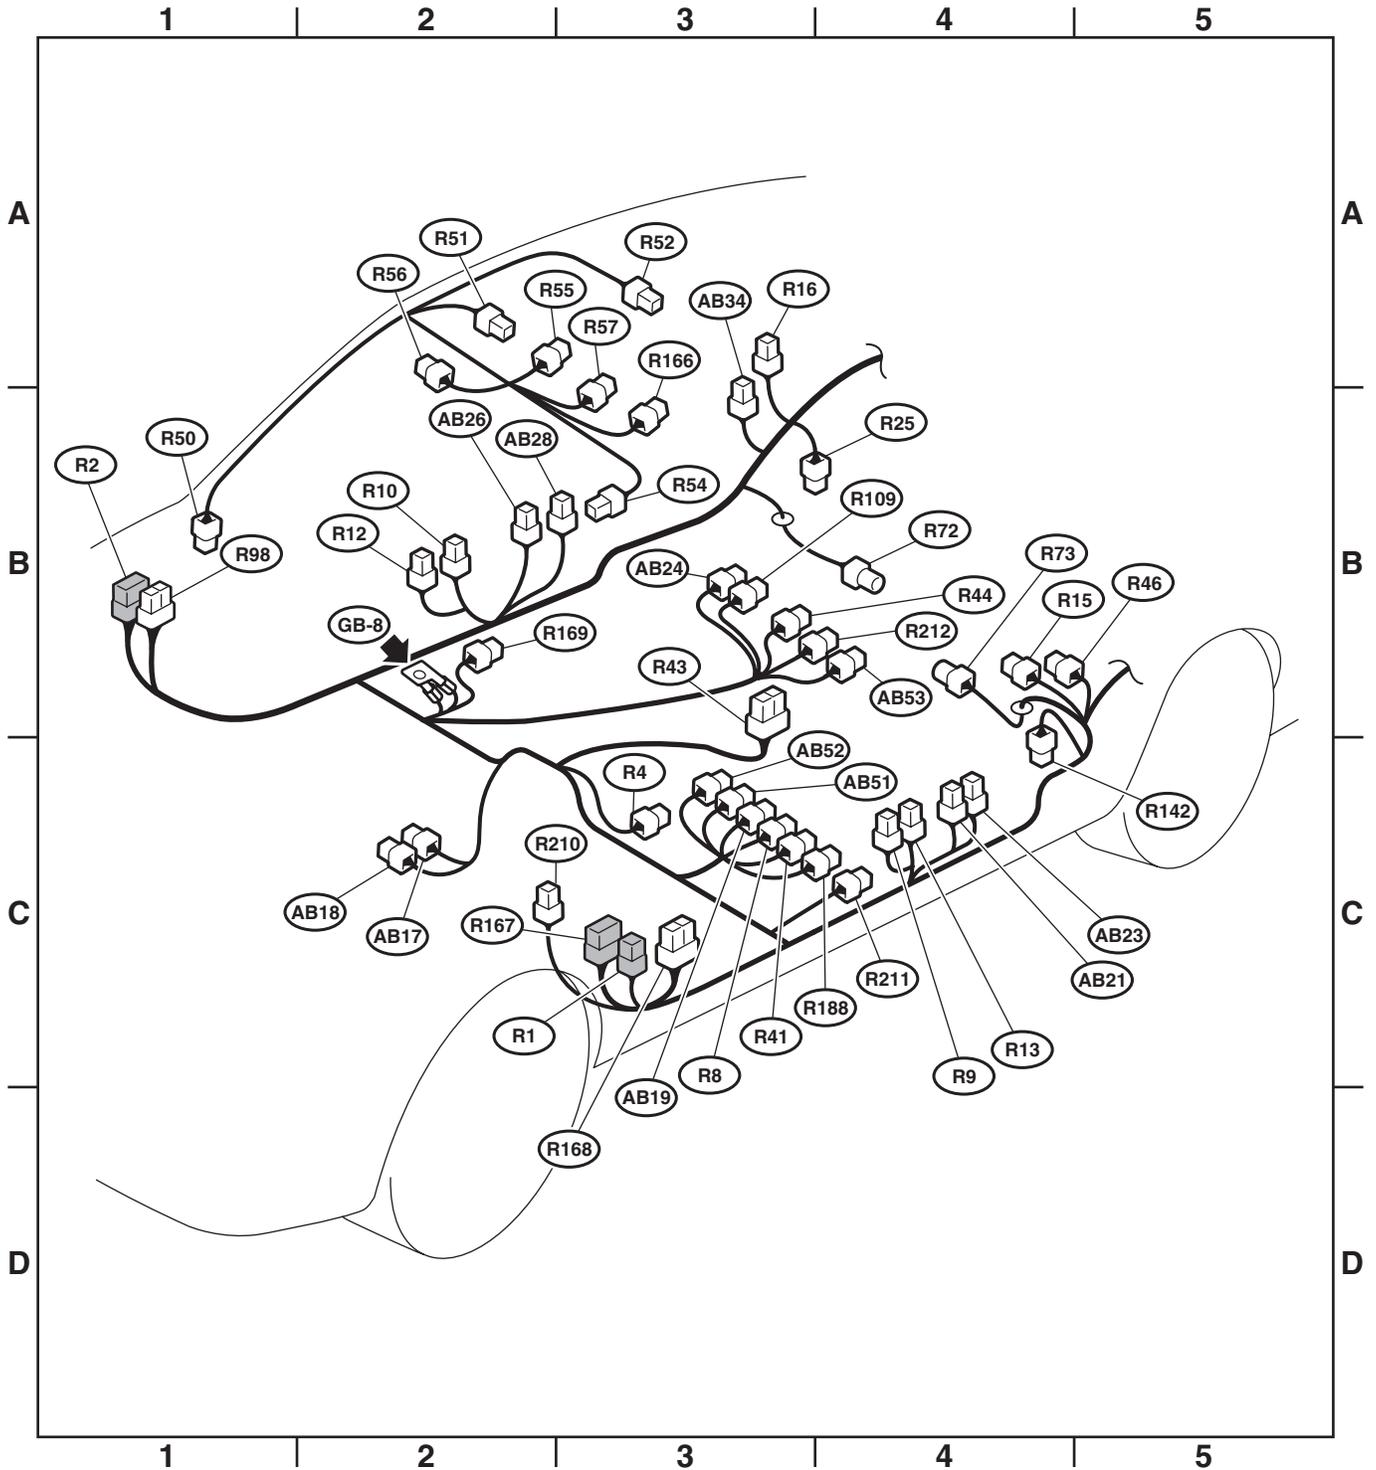

WI-05439